

Life moves us

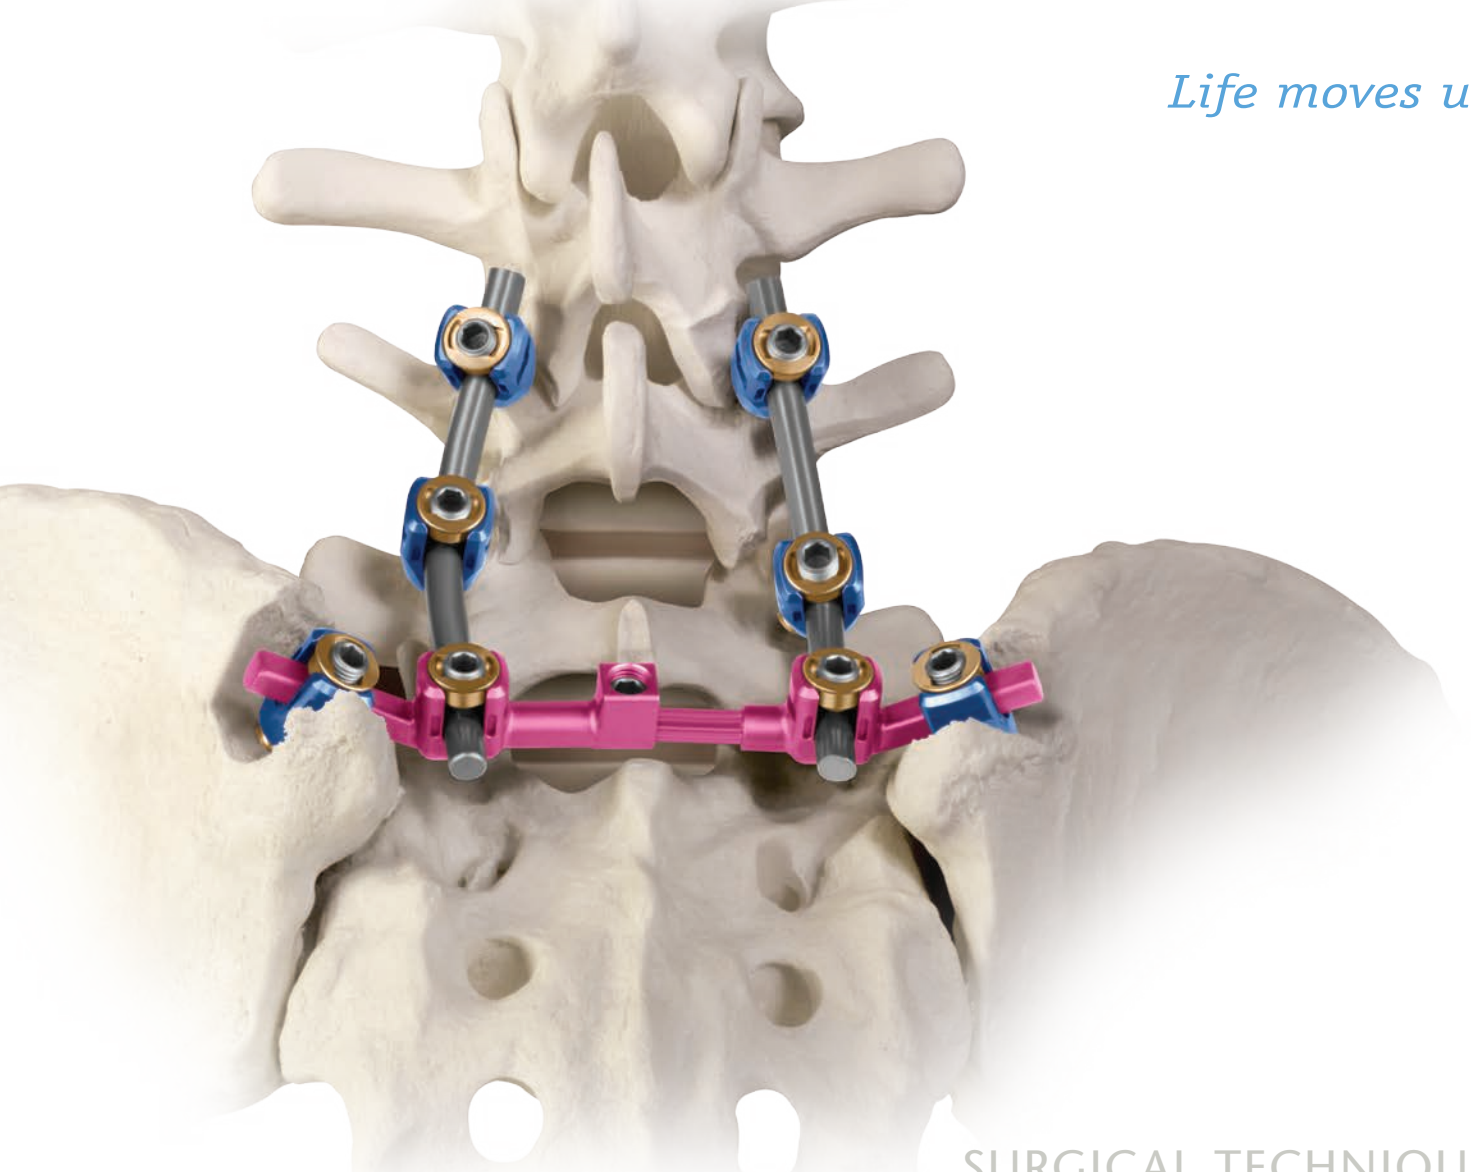

SURGICAL TECHNIQUE

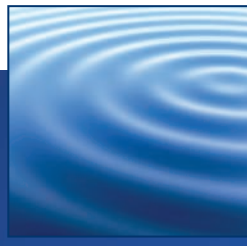

REVERE® ADDITION®

Sacroiliac Components

A component of the REVERE® Stabilization System

GLOBUS MEDICAL

Outside the US Only



Life moves us

At Globus, we move with a sense of urgency to deliver innovations that improve the quality of life for patients with spinal disorders. We are inspired by the needs of these patients and also the needs of the surgeons and health care providers who treat them.

This passion combined with Globus' world class engineering transforms clinical insights into tangible spine care solutions. We are driven to provide the highest quality products to improve the techniques and outcomes of spine surgery so patients can resume their lives as quickly as possible. We extend our reach beyond our world class implants, instrumentation, and service by partnering with researchers and educators to advance the science and knowledge of spine care.

The energy and enthusiasm each of us bring everyday to Globus is palpable. We are constantly in the pursuit of better patient care and understand that speed is critical because life cannot wait.

GLOBUS
MEDICAL

www.globusmedical.com

REVERE® ADDITION®

Sacroiliac Components




The REVERE® Stabilization System is a thoracolumbar fixation system with a full range of polyaxial screws, rods and connectors. These 5.5mm and 6.35mm rod systems feature low-profile screw designs for anatomic adaptability and a non-threaded locking cap to prevent cross-threading. The low-torque locking mechanism captures the rod with a 90° rotation. Optional cross connectors offer variable positioning to reduce profile or avoid dural contact. The system includes a broad range of powerful reduction instrumentation. REVERE® provides convenience and ease of use during surgery to treat a variety of posterior lumbar conditions with versatility and simplicity.

The REVERE® ADDITION® system is an adjunct to the REVERE® Stabilization System providing a comprehensive set of implants addressing complex cases. The sacroiliac components provide numerous options to create rigid, low-profile pelvic constructs in either titanium alloy or stainless steel for 5.5mm and 6.35mm diameter rod systems.

REVERE® ADDITION®

SACROILIAC COMPONENTS

Implants

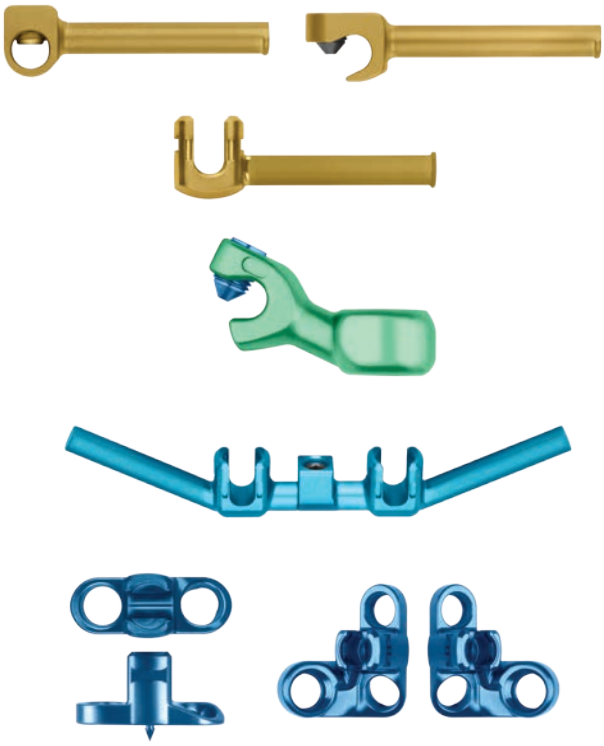

■ Closed and Open Offset Connectors

Designed with a retaining lip on the rod end

■ REVERE® Head Offset Connectors

An iliac offset connector featuring the REVERE® head design

■ Offset Housing Clamps

Solid fixation for longer constructs

■ Trans-Iliac Connectors

Secure pelvic fixation for special situations, such as revision of loosened screws, neuromuscular/congenital deformity, tumor removal

■ Sacral and Sacroiliac Plates

Multiple fixation points designed to minimize loosening

Material Options

Titanium Alloy (TAV)

- Strong titanium alloy
- More rigid than commercially pure titanium




Stainless Steel (SS)

- Offers more rigid construct
- Stiffer than titanium alloy or commercially pure titanium



Designed for Strong Pelvic Fixation

- REVERE® ADDITION® sacroiliac implants designed to help restore sagittal balance
- Ideal for use in complex deformity and trauma cases

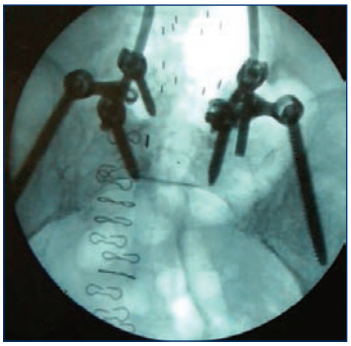

CONTENTS

Recommended Sets 4
Implant Overview 5
Instrument Overview 9

REVERE® Head Offset Connector Surgical Technique
1. Approach 15
2. Iliac Crest Preparation 15
3. Screw and Connector Insertion 16
4. Rod Insertion and Locking Cap Delivery 17
5. Compression or Distraction 18
6. Final Tightening 18
Final Construct 19

Offset Housing Clamp Surgical Technique
1. Approach 20
2. Iliac Crest Preparation 20
3. Clamp Selection and Trialing 21
4. Offset Housing Screw Insertion 23
5. Housing Plug Insertion 23
6. Rod Attachment 24
7. Housing Plug Final Tightening 25
8. Compression or Distraction 25
9 Set Screw Final Tightening 26
Final Construct 27

Trans-Iliac Connector Surgical Technique
1. Approach 28
2. Iliac Crest Preparation 28
3. Screw Insertion 29
4. Trans-Iliac Connector Insertion and Locking Cap Delivery 29
5. Rod Insertion into Trans-Iliac Connector 30
6. Final Tightening 31
Final Construct 32

Sacral Plate Surgical Technique
1. Approach 33
2. Sacral Screw Site Preparation 33
3. Sacral Plate and Screw Insertion 34
4. Rod Insertion and Locking Cap Delivery 35
5. Compression or Distraction 36
6. Final Tightening 36
Final Construct 37

Sacroiliac Plate Surgical Technique
1. Approach 38
2. Screw Site / Iliac Crest Preparation 38
3. Sacroiliac Plate and Screw Insertion 39
4. Rod Insertion and Locking Cap Delivery 40
5. Compression or Distraction 41
6. Final Tightening 42
Final Construct 43

REVERE® ADDITION® Sacroiliac Fixation Set 44
REVERE® Sacral Plate Stand-Alone Set 52
Stainless Steel REVERE® ADDITION® Sacroiliac Fixation Set 54

The Surgical Technique shown is for illustrative purposes only. The technique(s) actually employed in each case always depends on the medical judgment of the surgeon exercised before and during surgery as to the best mode of treatment for each patient. Additionally, as instruments may occasionally be updated, the instruments depicted in this Surgical Technique may not be exactly the same as the instruments currently available. Please consult with your sales representative or contact Globus directly for more information.

RECOMMENDED SETS TO USE WITH REVERE® ADDITION®

The REVERE® ADDITION® Sacroiliac Fixation Set (954.911) is meant to be used in conjunction with other REVERE® sets. At a minimum, the following sets are needed for 5.5mm and 6.35mm rod cases:

For All Cases:

- REVERE® ADDITION® Sacroiliac Fixation System (954.911)
- Must use either 654.415 or 624.604 to final tighten ADDITION® set screws to avoid damage.

REVERE® 5.5mm Cases:

- REVERE® Implants (924.901 or 924.931)
- REVERE® Instruments I (924.902)
- REVERE® Instruments II (924.903)
- REVERE® Dual Outer Diameter (DOD) Polyaxial Screw Loaner Set (924.923LN) includes additional implants
- 5.5mm: *In Situ* Benders - Coronal (624.309/624.310) and Sagittal (624.303/624.304)

REVERE® 6.35mm Cases:

- REVERE® 6.35mm Implants (934.901)
- REVERE® Instruments I (934.902)
- REVERE® Instruments II (934.903)
- REVERE® Dual Outer Diameter (DOD) Polyaxial Screw Loaner Set (934.923LN) includes additional implants
- 6.35mm: *In Situ* Benders - Coronal (634.309/634.310) and Sagittal (634.303/634.304)

Also recommended depending upon the case:

- Universal Implant Removal Set (954.901LN)
- Table-Top Rod Cutter (602.508) available, and an *In Situ* Rod Cutter and Vise Grips (602.526) for revisions
- REVERE® Closed Head DOD Screws Instrument Set (924.936LN), additional implant modules required
- REVERE® Deformity Instruments (924.904)
- REVERE® Deformity Implants, Mono Screws (924.905)
- REVERE® 6.35mm Deformity Instruments (934.904)
- REVERE® 6.35mm Deformity Implants, Mono Screws (934.905)
- REVERE® ADDITION® Revision Set (954.910LN)
- REVERE® Large Diameter Screw Set (924.937LN)

Stainless Steel Options:

- Stainless Steel REVERE® ADDITION® Sacroiliac Fixation System (954.913)
- Stainless Steel REVERE® Implant Set (924.909) with 3.5mm Hex Driver, Torque Limiting, SS (624.611)
- Stainless Steel REVERE® 6.35mm Implant Set (934.909) with 3.5mm Torque Limiting Driver, SS (634.611)
- Stainless Steel REVERE® 6.35mm Dual Outer Diameter (DOD) Polyaxial Loaner Screw Set (934.923LN) includes additional implants
- Stainless Steel REVERE® ADDITION® Revision Set (954.912LN)


IMPLANT OVERVIEW


The REVERE® ADDITION® Iliac Connectors consist of the following implants, in both titanium alloy and stainless steel 5.5mm and 6.35mm configurations:

- Open Offset Connector
- Closed Offset Connector
- REVERE® Head Offset Connector
- Offset Housing Clamp
- Trans-Iliac Connector
- Sacral and Sacroiliac Plates (5.5mm titanium alloy only)

Open and Closed Offset Connector

- Faceted offset bar locks in various rotational positions
- Standard lengths with retaining lip; 15–35mm in 5mm increments
- Longer connectors additionally available for constructs requiring custom sizing: 100mm, 120mm, and 150mm
- Recommended for use with DOD Polyaxial Screws

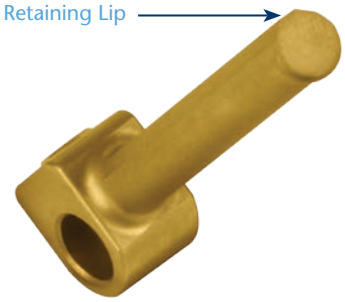


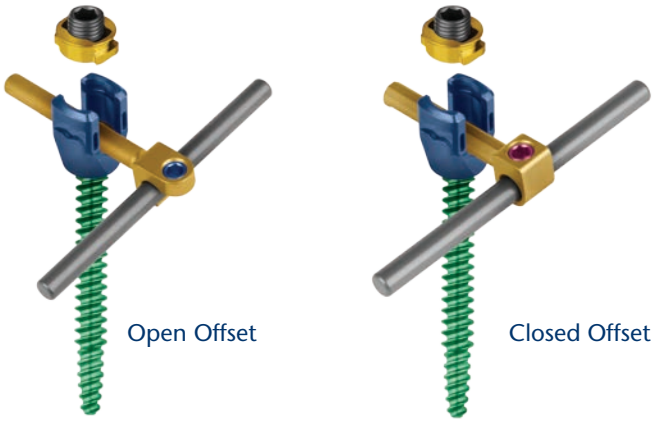


Longer lengths available

REVERE® Head Offset Connector

- Alternative Iliac Offset Connector securely captures the rod, while allowing further construct manipulation
- REVERE® style head is used with REVERE® Locking Cap and is compatible with all REVERE® reduction instruments
- D-style offset bar resists rod rotation
- Standard lengths with retaining lip from 15mm to 35mm
- Longer connectors additionally available for constructs requiring customized sizing: 100, 120, and 150mm
- Recommended for use with DOD Polyaxial Screws

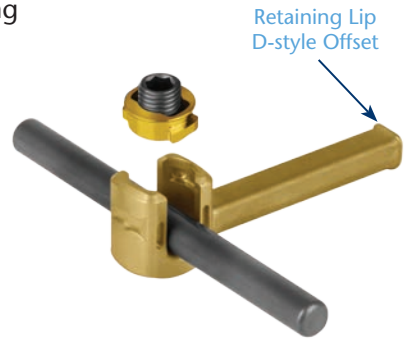


IMPLANT OVERVIEW

Offset Housing Clamp



- Rounded, low-profile 9mm iliac implant
- ±20° of polyaxial angulation with reduced connection points
- Straight, left and right offset options, angled up at 25°
- 15mm and 20mm lengths

Dual Outer Diameter (DOD) Offset Housing Screw

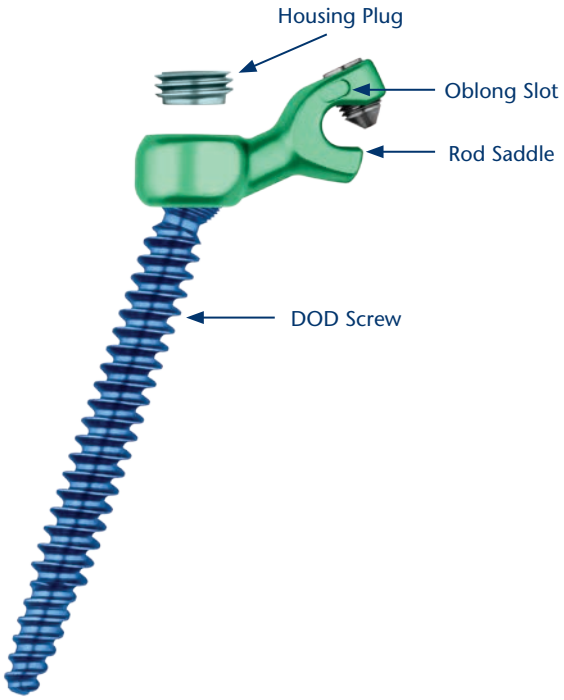



- Used only with the Offset Housing Clamp
- DOD Screws: 6.5/8.0mm diameters (blue) and 7.0/8.5mm diameters (green)
- Double lead thread for ease of insertion
- Screw lengths 65–120mm
- Clamp and screw are secured by the Housing Plug

DOD Offset Housing Clamp Assembly

Trans-Iliac Connector

- Secure pelvic fixation for special situations, such as revision of loosened screws, neuromuscular/congenital deformity, tumor removal
- Telescoping/rotating bar allows for variable width and sagittal adaptation
- D-style solid offset bar resists rotation
- Three size ranges to accommodate varying anatomy
- Recommended for use with Dual Outer Diameter Polyaxial Screws

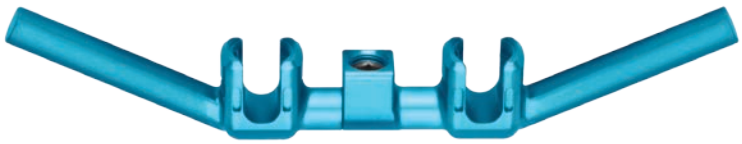

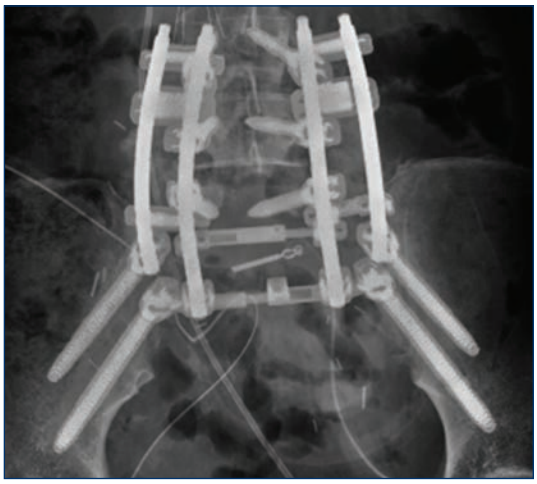

Trans-Iliac Connector utilized in *En Bloc* Sacretomy

IMPLANT OVERVIEW

Sacral and Sacroiliac Plates

- Multiple fixation points intended to minimize plate loosening
- Allows divergent screw placement for a more rigid construct
  - For example, superior S1 screw medial and inferior sacral ala screw lateral
- Third fixation point allows variable angles (±20°) for iliac screw placement
- Short central spike for initial positioning and determination of screw trajectory
- Integrated REVERE® screw head aids in reduction and rod placement
- Designed to adapt to natural anatomy of pelvis and spine
- Low-profile 16mm
- Plates accept 5.5mm rods only
- Titanium alloy only



Sacral Plates



Sacroiliac Plates

Dual Outer Diameter (DOD) Bone Screws

- Optimizes purchase in both cancellous and cortical bone to aid in sacral fixation
- Nominal distal diameter allows for deeper cortical purchase in the sacral promontory
- Distal/proximal diameter of 6.0/7.5mm and lengths of 30–60mm
- Low-profile design
- Titanium alloy only

Standard Bone Screws

- Full cancellous thread to maximize purchase in the ala
- 5.5, 6.5 and 7.5mm diameters
- 30–60mm lengths
- Low-profile design
- Titanium alloy only



DOD Bone Screw




Standard Bone Screw

IMPLANT OVERVIEW


Non-threaded Locking Cap

- Non-threaded design eliminates cross-threading
- Low-torque locking mechanism
- 90° rotation to capture the rod
- Optimal design decreases need for rod reduction
- Set screw pre-torqued in place to prevent any unintentional movement during shipping or handling
- Allows direct placement with hex driver for easier assembly

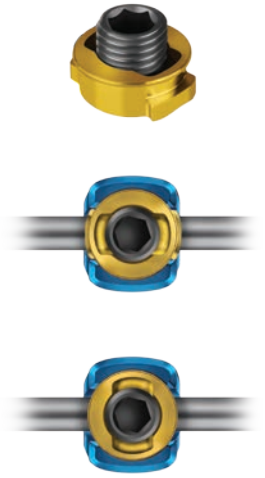

REVERE® Dual Outer Diameter (DOD) Screws

- Multiple sizes to accommodate patient anatomy
- Color-coded screws for easy identification
- Applicable for stabilization in both sacral and iliac fixation
- Nominal diameter at distal end allows for deeper insertion into sacrum and iliac
- Large diameter portion maintains optimum purchase in cancellous bone
- Increased neck diameter provides optimal strength
- Constant core diameter for ideal screw positioning
- Wide variety of sizes and lengths available for 5.5mm and 6.35mm rod constructs

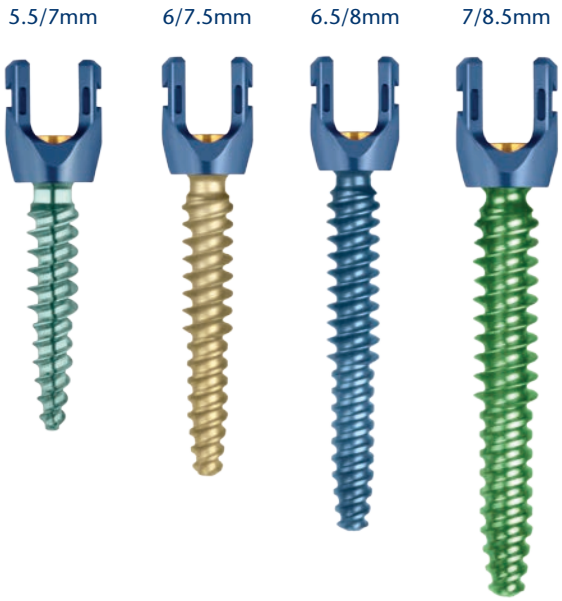

Diameter	Length
5.5/7mm	30–65mm
6/7.5mm	30–65mm
6.5/8mm	30–100mm*
7/8.5mm	30–100mm*
Available in 5.5mm and 6.35mm Rod-based Systems **Up to 120mm length for REVERE® 6.35*	

**Testing on file at Globus Medical*


INSTRUMENT OVERVIEW

Sacroiliac Preparation




Sacral Probe, Straight 654.401

Screw/Plate/Housing Plug Insertion

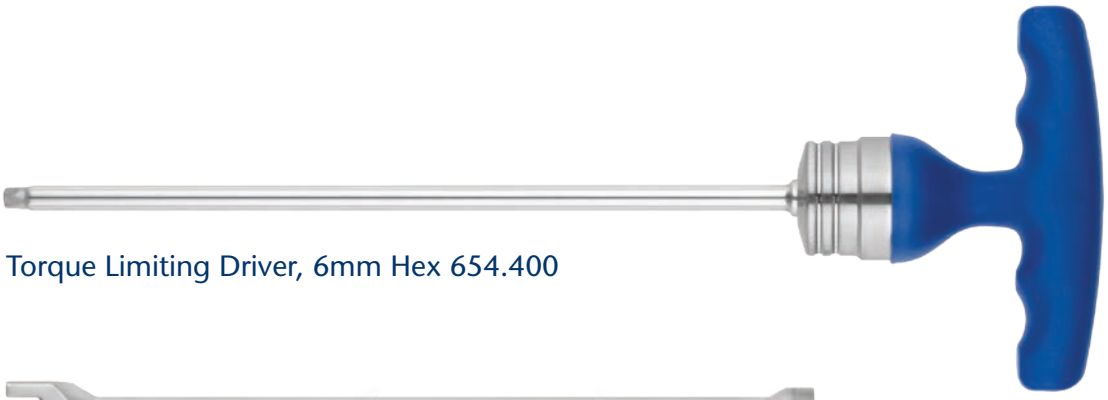

Torque Limiting Driver, 6mm Hex 654.400

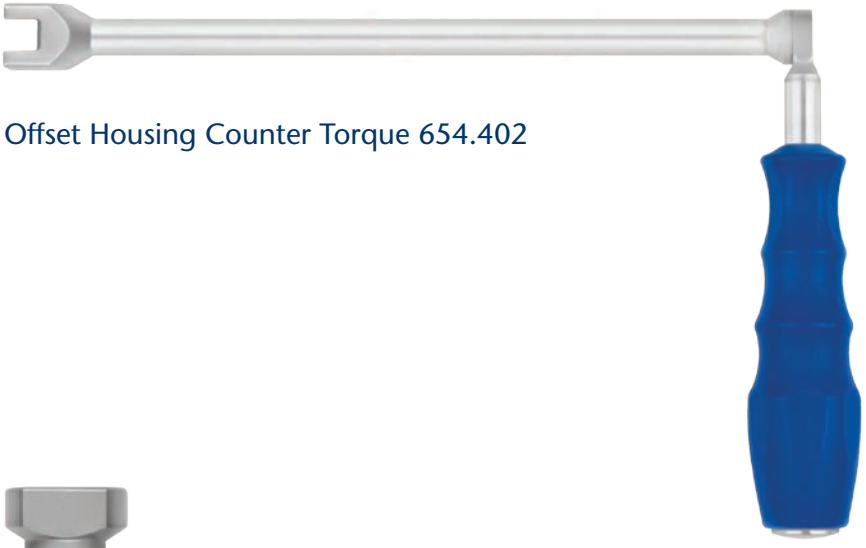

Offset Housing Counter Torque 654.402



Hammer 603.008

Screw/Plate/Housing Plug Insertion (cont'd)



Monoaxial Screwdriver, Spring-Loaded 624.320




Quick Disconnect 1/4" Non-Ratcheting, Large Sport Handle 634.406

Trials and Reducers



ADDITION® Offset Housing Trial/Reducer 654.413



REVERE® ADDITION® Reduction Tower 624.802



T-Handle, Tower Reducer 624.801




ADDITION® Sacroiliac Post 654.412

Final Tightening



3.5mm Torque Limiting Driver 654.415

Standard REVERE® Set

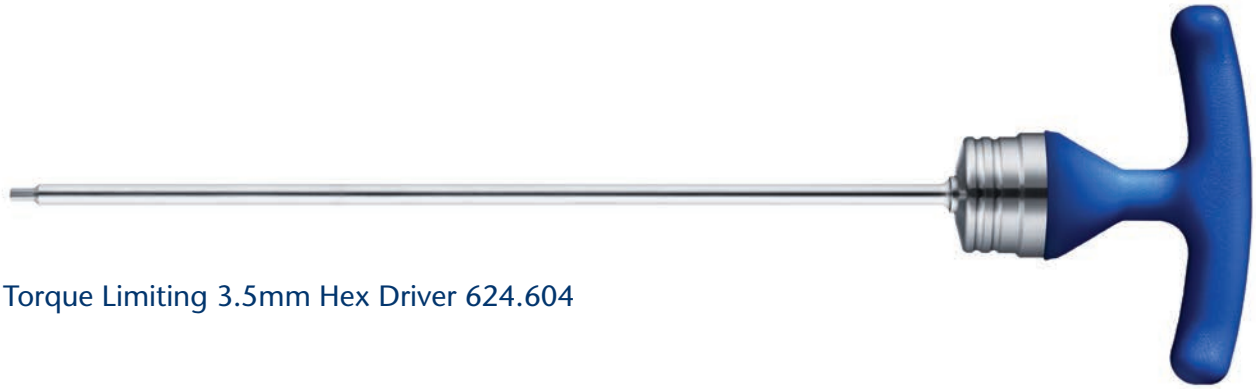

Torque Limiting 3.5mm Hex Driver 624.604



Ball Tip Probe, Double Ended 624.110




Rod Bender, 5.5mm Rod 624.607



Rod Template, 150mm 602.501

Standard REVERE® Set (cont'd)

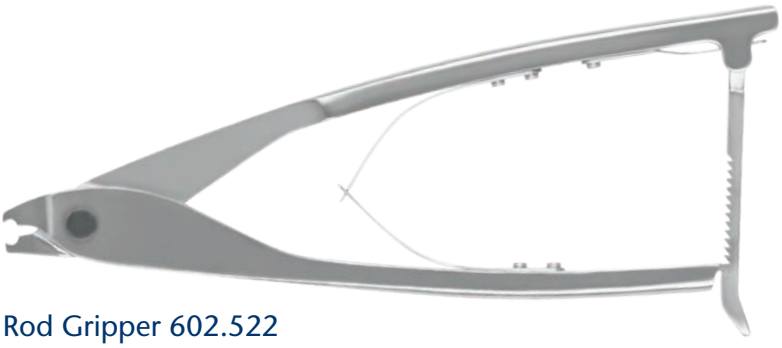

Rod Gripper 602.522



Rod Holder 624.510



Parallel Compressor 624.503



Parallel Distractor 624.504



Locking Cap Driver 624.601

Standard REVERE® Set (cont'd)



Final Tightening Counter Torque 624.603



Locking Cap Guide 624.602



3.5mm Hex Driver, Self-Retaining 624.406



Pedicle Awl 602.104



Pedicle Probe, Straight 602.101

Additionally Available



Rod Cutter 602.508

REVERE® HEAD OFFSET CONNECTOR SURGICAL TECHNIQUE


Refer to the REVERE® Stabilization System Surgical Technique (GMTGD17) for use of REVERE® implants and associated instruments.

Step 1 Approach

The patient is placed under anesthesia and positioned prone. The operative area is carefully cleaned and an incision is made at the appropriate level(s). Lateral C-arm fluoroscopy or other radiographic methods can be utilized throughout surgery to ensure correct screw placement.

Step 2 Iliac Crest Preparation

Expose the posterior superior iliac spine. Locate the entry point of the iliac screw in the pelvis. Decorticate the entry point with a **Pedicle Awl** or a bur. Use a **Sacral Probe** to open the screw pathway. Demarcations every 10mm on the probe indicate the depth of the pathway and help determine proper screw length. Tap the pilot hole. Use a **Ball Tip Probe** to verify that the walls of the prepared screw pathway are not violated. Repeat on the contralateral side.

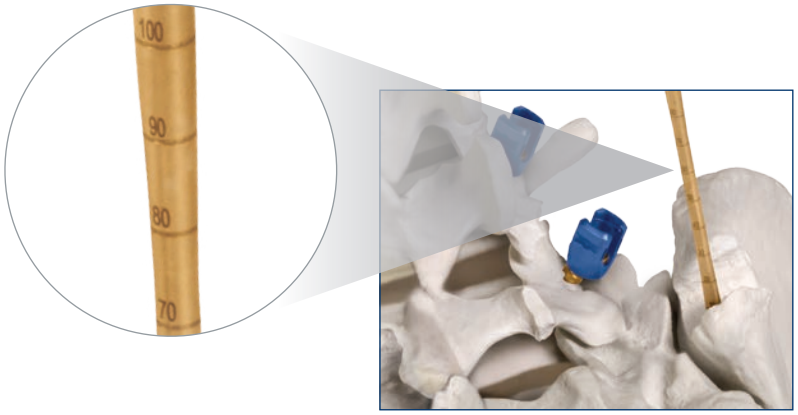

Using the Sacral Probe




Using the Ball Tip Probe

Step 3 Screw and Connector Insertion


Insert the desired REVERE® screw or REVERE® Dual Outer Diameter (DOD) screw into the iliac crest.

Select the appropriate length REVERE® Head Offset Connector and insert it into the REVERE® screw head using the **Rod Holder** or **Rod Gripper**.

Stabilize the offset connector by inserting a locking cap in the iliac screw and provisionally tighten the set screw.

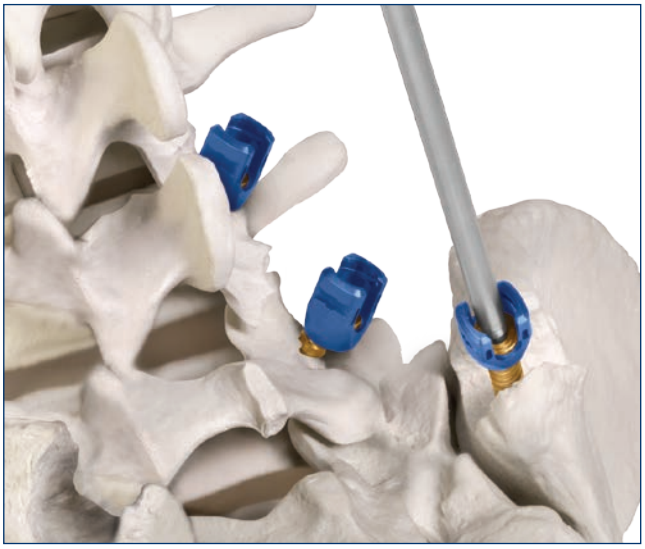

Screw insertion

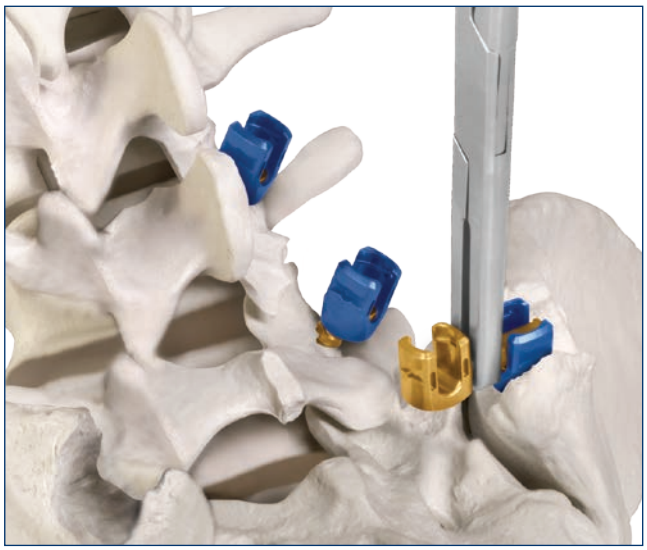

Insertion of the REVERE® Head Offset Connector into screw

Step 4 Rod Insertion and Locking Cap Delivery


Rod Preparation

Determine the appropriate length and contour of the rod using the **Rod Template**.

*Note: The rods may be contoured using the **Rod Bender** and cut to length using the **Rod Cutter**.*


Rod Insertion

Using the Rod Holder or Rod Gripper, grasp the rod and insert the rod into the REVERE® Head Offset Connector and superior pedicle screw(s).

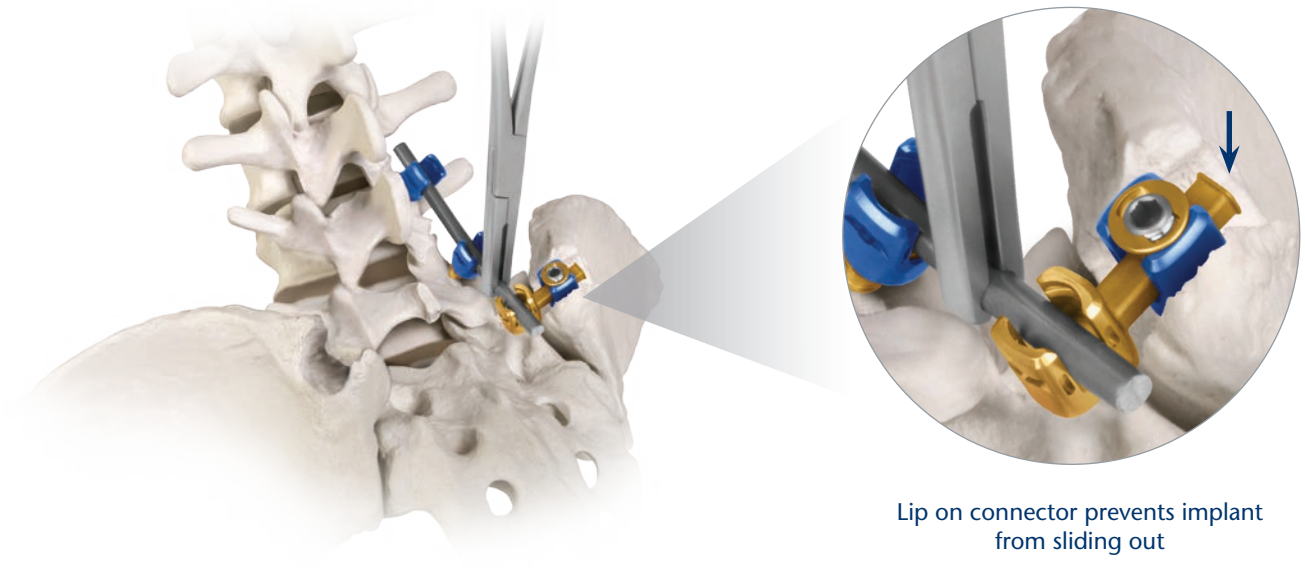

Lip on connector prevents implant from sliding out


Insert a locking cap in the offset connector to secure the rod.
Repeat on the contralateral side.

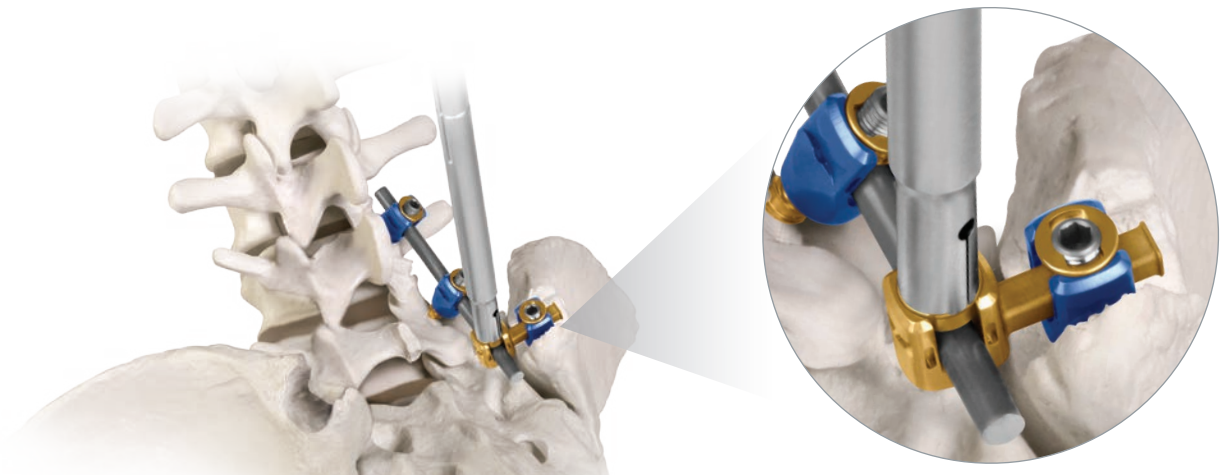


Securing the rod to the REVERE® Head Offset Connector with a locking cap

Step 5 Compression or Distraction

REVERE® pedicle screws can be compressed or distracted along the rod as necessary using the **Parallel Compressor** or **Parallel Distractor**, respectively. REVERE® screws allow for screw angulation to be free or locked under compression or distraction. Tighten one of the set screws to establish a rigid point for compression or distraction. Once compression or distraction is completed, provisionally tighten the set screws using the **3.5mm Hex Driver, Self-Retaining** or the **Torque Limiting 3.5mm Hex**.

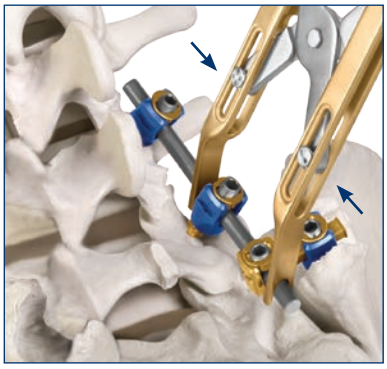

Compression

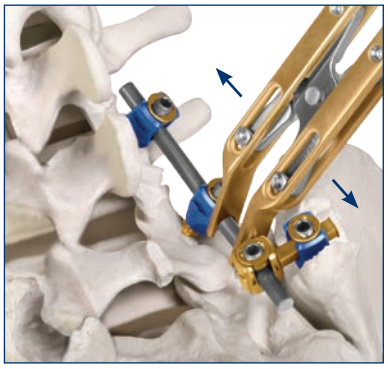


Distraction

Step 6 Final Tightening

Final tightening of the set screws is necessary to secure the construct and is accomplished using the Torque Limiting 3.5mm Hex Driver and **Final Tightening Counter Torque** or Rod Gripper.

Insert the hex driver into the counter torque and visually confirm that the hex is fully engaged in the set screw. Slide the counter torque over the screw head, ensuring that the instrument is fully seated. Rotate the hex driver until it reaches the torque limit and confirm by rotating to a second audible click. Repeat for all locking caps.

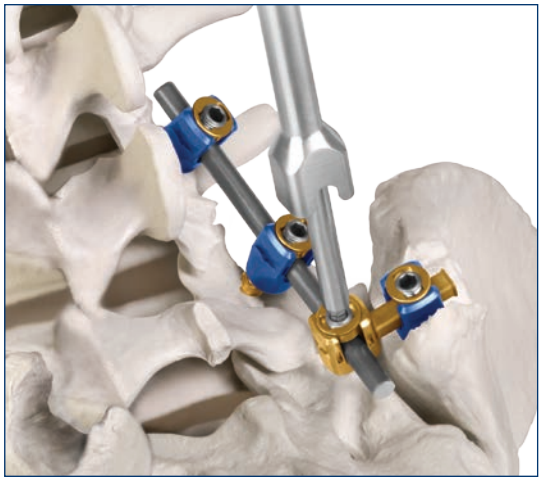

Visually confirming hex is engaged

Torque Limits

Locking Cap Set Screw (3.5mm)
Titanium alloy implants are torqued to 5.5Nm
Stainless steel implants are torqued to 8.0Nm

Final Construct



OFFSET HOUSING CLAMP
SURGICAL TECHNIQUE


Refer to the REVERE® Stabilization System Surgical Technique (GMTGD17) for use of REVERE® implants and associated instruments.

Step 1 Approach

The patient is placed under anesthesia and positioned prone. The operative area is carefully cleaned and an incision is made at the appropriate level(s). Lateral C-arm fluoroscopy or other radiographic methods can be utilized throughout surgery to ensure correct screw placement.

Step 2 Iliac Crest Preparation

Expose the posterior superior iliac spine. Locate the entry point of the iliac screw in the pelvis. Decorticate the entry point with a **Pedicle Awl** or a bur. Use a **Sacral Probe** to open the screw pathway. Demarcations every 10mm on the probe indicate the depth of the pathway and help determine proper screw length. Tap the pilot hole. Use a **Ball Tip Probe** to verify that the walls of the prepared screw pathway are not violated. Repeat on the contralateral side.

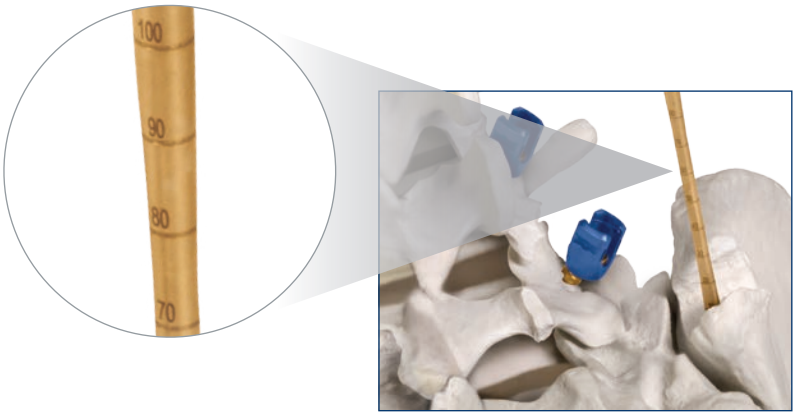

Using the Sacral Probe




Using the Ball Tip Probe

Step 3 Clamp Selection and Trialing

Option A: ADDITION® Offset Housing Trial/Reducer

Insert the REVERE® ADDITION® Offset Housing Clamp onto the **Offset Housing Trial/Reducer** by grasping the trial/reducer with the "IMPLANT HOLDER" etching visibly facing up. Open the trial/reducer by grasping the trial/reducer between the finger holes and unhook. Place the oblong tabs of the trial/reducer into the corresponding slots on the offset housing clamp. Compress the handles to secure the clamp.

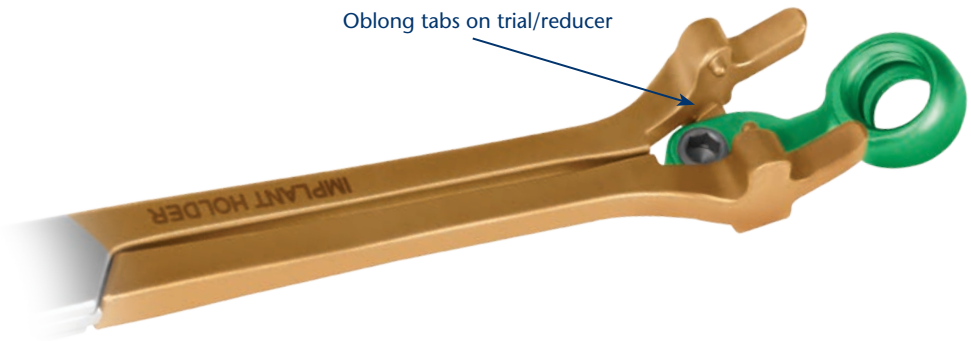


Positioning the trial/reducer onto the clamp

With the trial/reducer connected to the offset housing clamp, insert the sacroiliac post through the offset housing clamp. Lower the post into the iliac area where the clamp is to be inserted.

Determine if the correct size and/or geometry is being used. If not, retry using another size/shape REVERE® Offset Housing Clamp.

Note: The REVERE® ADDITION® Sacroiliac Post is for trialing purposes only and is not intended for implantation.

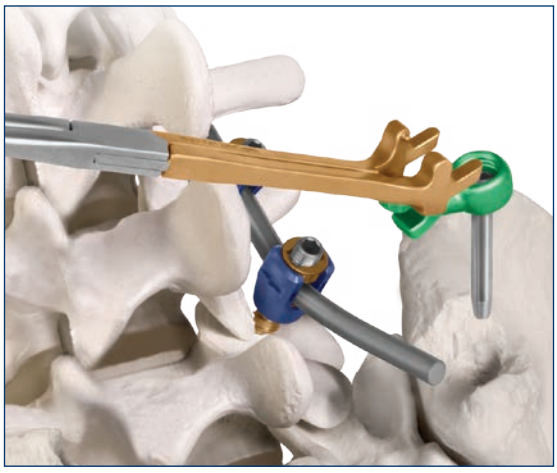


Lowering the offset housing clamp and sacral post into iliac for trialing


Clamp Selection and Trialing (cont'd)

Option B: Ball Tip Probe, Double Ended

Place the angled end of the Ball Tip Probe into the iliac screw hole. Lower the REVERE® Offset Housing Clamp into place.

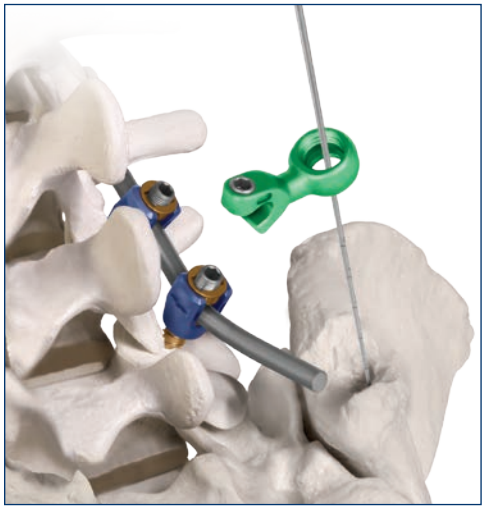

Slide the offset housing clamp over the Ball Tip Probe shaft

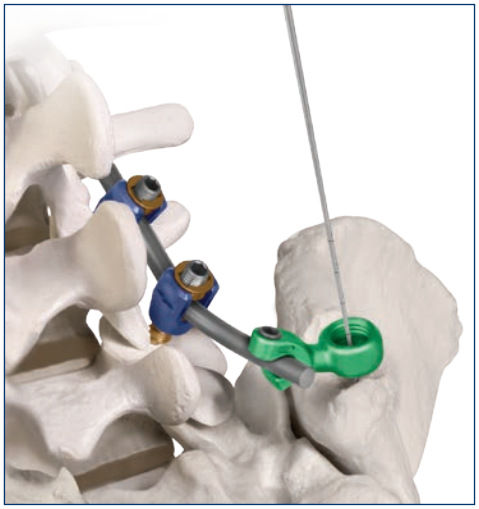


Offset housing clamp lowered to the screw hole

Option C: Sacral Probe, Straight

Hold the sacral probe and slide the REVERE® Offset Housing Clamp onto the shaft. Insert the sacral probe into the screw hole. Lower the clamp into place to confirm fit.



Lowering the offset housing clamp over the sacral probe shaft

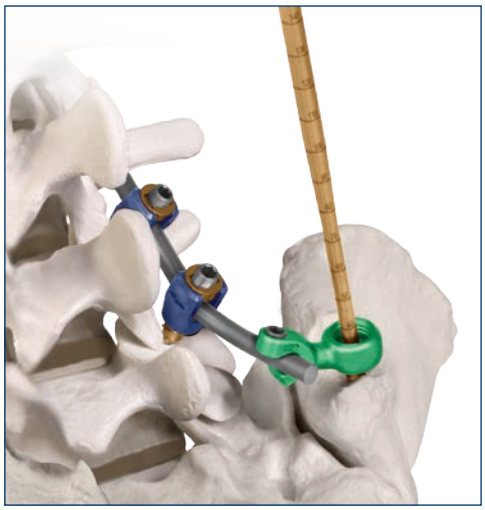


Offset housing clamp lowered to the screw hole

Step 4 Offset Housing Screw Insertion

Once the clamp size is determined, and the appropriate length DOD offset housing screw is selected, insert the screw through the offset housing clamp and into the iliac crest with the **3.5mm Hex Driver, Self Retaining**. The Clamp allows ±20° of screw angulation.


To prevent excessive rod movement during implant insertion, provisionally position the rod in the implant and lower the set screw onto the rod without final tightening.

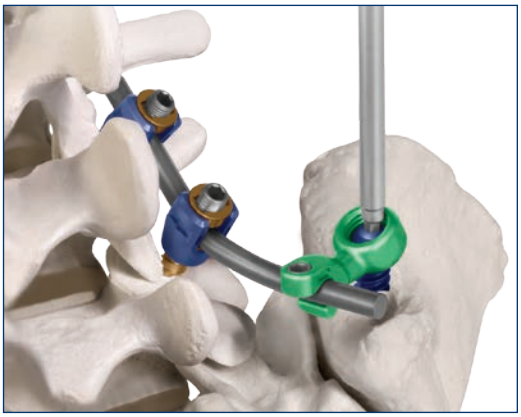


Driving the DOD Offset Housing Screw into the iliac

Step 5 Housing Plug Insertion

Engage the **Self-Retaining Torque Limiting Driver, 6mm Hex** into the Housing Plug from the Housing Plug module. Insert the plug into the top of the offset housing clamp and provisionally tighten.

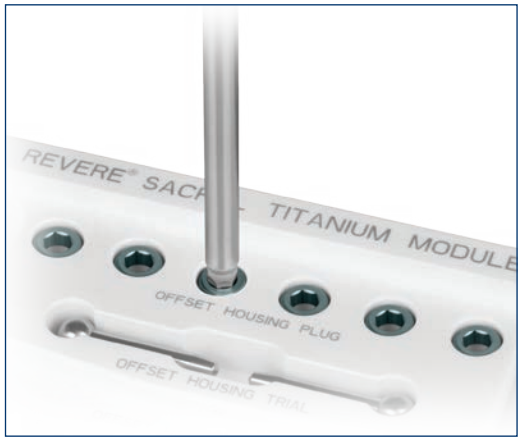

Removing Housing Plug from module

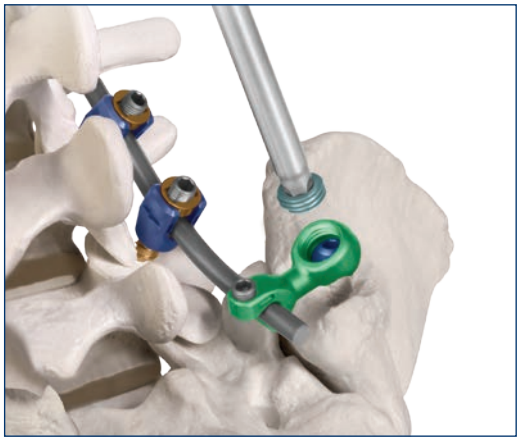


Inserting housing plug into top of offset housing clamp using Torque Limiting Driver, 6mm Hex

Step 6 Rod Attachment

Engage the offset end of the housing clamp with the caudal end of the construct.

Provisionally tighten the set screw using the 3.5mm hex driver.

Repeat on the contralateral side.

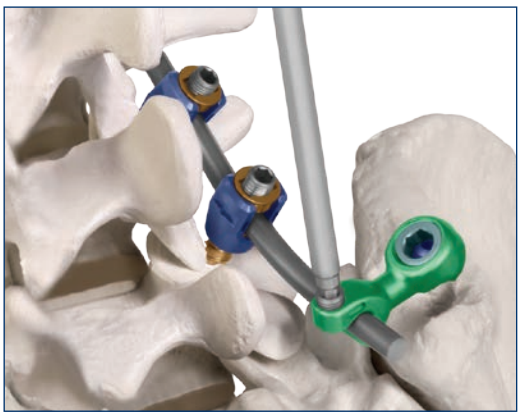

Driving the DOD Offset Housing Screw into the iliac


Rod Reduction

Rod reduction is optional during the procedure. The ADDITION® Offset Housing Trial/Reducer may also be used to reduce the rod laterally.

Grasp the trial/reducer with the "LATERAL REDUCER" etching visible, as shown below.



Open the trial/reducer and insert the round tabs into the oblong slots of the offset housing clamp. Rotate the trial/reducer until the rod is fully seated in the implant saddle. Secure the set screw using the 3.5mm hex driver.

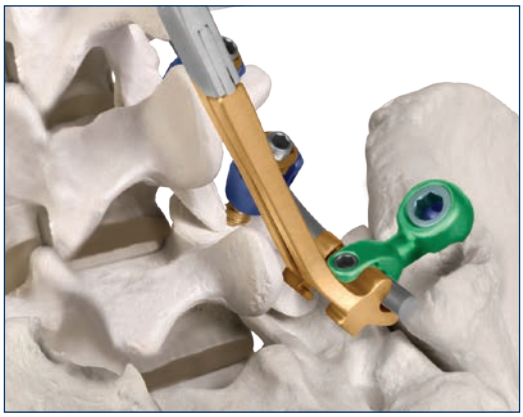


Rotating the reducer and reducing the rod using the trial/reducer

Step 7 Housing Plug Final Tightening

Final tightening of the Housing Plug is necessary to secure the construct.


Insert the Torque Limiting Driver, 6mm Hex, into the **Offset Housing Counter Torque** and visually confirm the hex is fully engaged in the Housing Plug. Slide the Offset Housing Counter Torque over the Housing Clamp, ensuring the instrument is fully seated. Rotate the Torque Limiting Driver, 6mm Hex, until it reaches the torque limit (8.5Nm for titanium alloy and 10Nm for stainless steel). The torque limit is confirmed with two audible clicks. Repeat on the contralateral side.

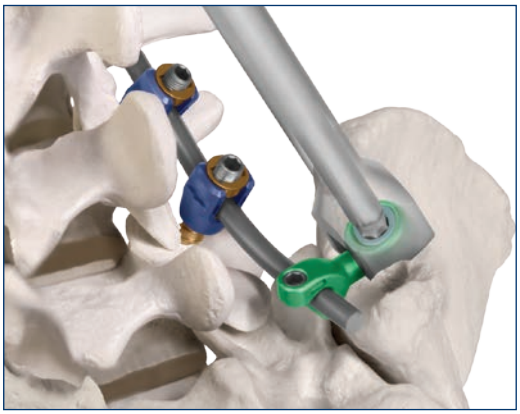


Final Tightening of the Housing Plug

Step 8 Compression or Distraction

REVERE® pedicle screws can be compressed or distracted along the rod as necessary using the Parallel Compressor or Parallel Distractor, respectively. REVERE® screws allow for screw angulation to be free or locked under compression or distraction. Tighten one of the set screws to establish a rigid point for compression or distraction. For parallel distraction, provisionally tighten the locking cap's set screw (locking the screw head) and then loosen it. Once compression or distraction is completed, provisionally tighten the set screws using the Torque Limiting 3.5mm Hex Driver.

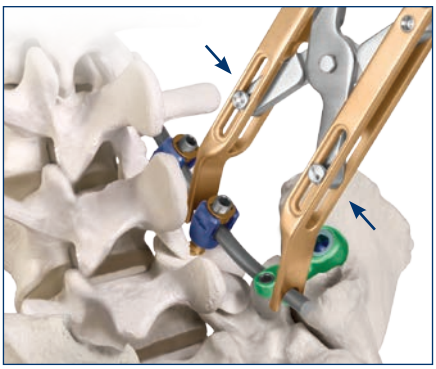

Compression of pedicle screw and REVERE® Offset Housing Clamp

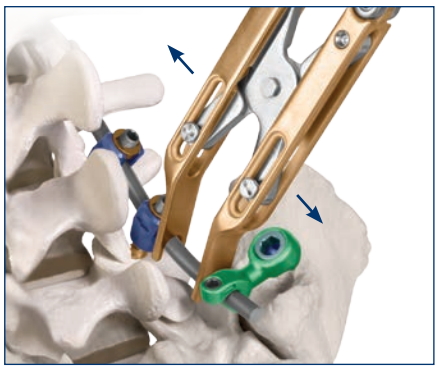


Distraction of pedicle screw and REVERE® Offset Housing Clamp

Step 9 Set Screw Final Tightening


Final tightening of the set screw is necessary to secure the construct and is accomplished using the Torque Limiting 3.5mm Hex Driver or **REVERE® ADDITION® Torque Limiting 3.5mm Hex Driver** and **Rod Gripper**.

Secure the Rod Gripper to the rod above the Housing Clamp.

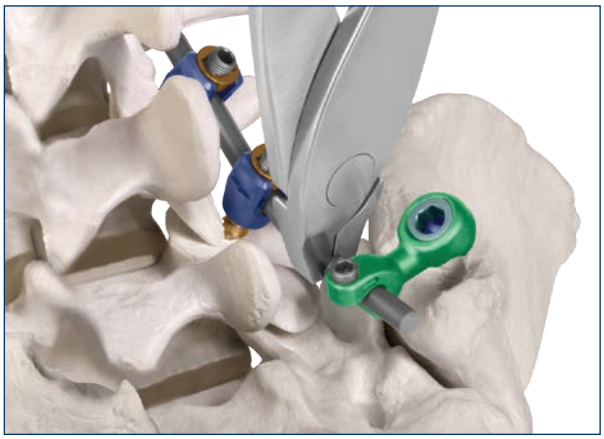

Rod Gripper secured above the Housing Clamp

Insert the Torque Limiting 3.5mm Hex Driver into the hex, visually confirming that the tip is fully engaged in the set screw. Rotate the hex driver until it reaches the torque limit, confirmed by two audible clicks.

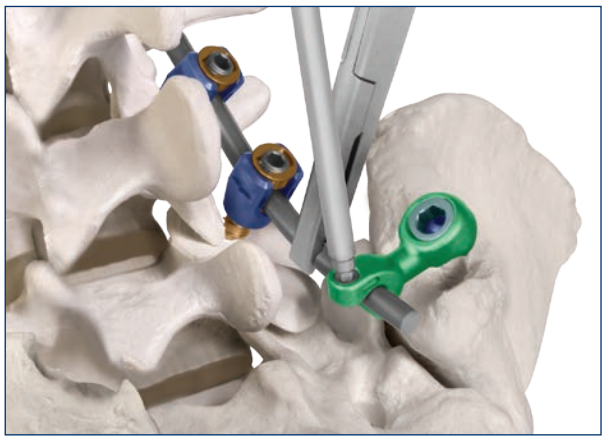

Rod Gripper secured above the Housing Clamp

Torque Limits

Implants with 3.5mm Hex set screw
Titanium alloy implants are torqued to 5.5Nm
Stainless steel implants are torqued to 8.0Nm

Locking Cap Set Screw (3.5mm)
Titanium alloy implants are torqued to 5.5Nm
Stainless steel implants are torqued to 8Nm

Housing Plugs (6mm)
Titanium alloy Housing Plugs are torqued to 8.5Nm
Stainless steel Housing Plugs are torqued to 10Nm

Final Construct



TRANS-ILIAC CONNECTOR
SURGICAL TECHNIQUE


Refer to the REVERE® Stabilization System Surgical Technique (GMTGD17) for use of REVERE® implants and associated instruments.

Step 1 Approach


The patient is placed under anesthesia and positioned prone. The operative area is carefully cleaned and an incision is made at the appropriate level(s). Lateral C-arm fluoroscopy or other radiographic methods can be utilized throughout surgery to ensure correct screw placement.

Step 2 Iliac Crest Preparation

Expose the posterior superior iliac spine. Locate the entry point of the iliac screw in the pelvis. Decorticate the entry point with a **Pedicle Awl** or bur. Use a **Sacral Probe** to open the screw pathway. Demarcations every 10mm on the probe indicate the depth of the pathway and help determine proper screw length. Tap the pilot hole. Use a **Ball Tip Probe** to verify that the walls of the prepared screw pathway are not violated. Repeat on the contralateral side.

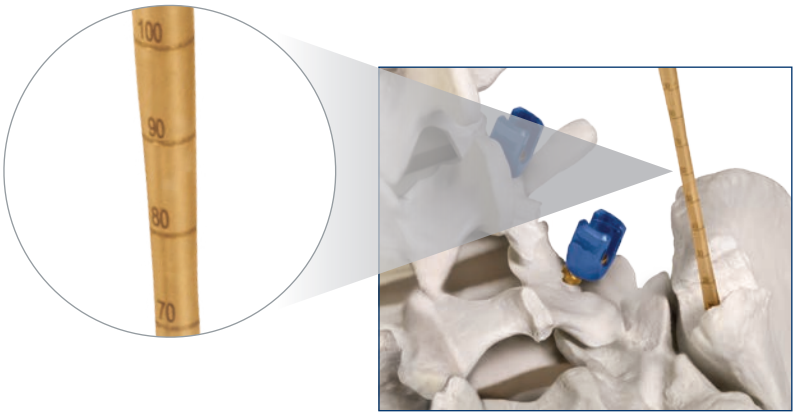


Using the Sacral Probe

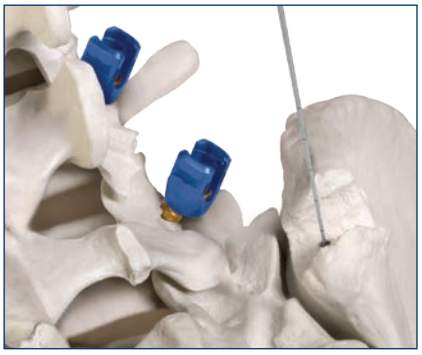

Using the Ball Tip Probe

Step 3 Screw Insertion

Insert the desired REVERE® DOD Screw into the iliac crest. Repeat on the contralateral side.

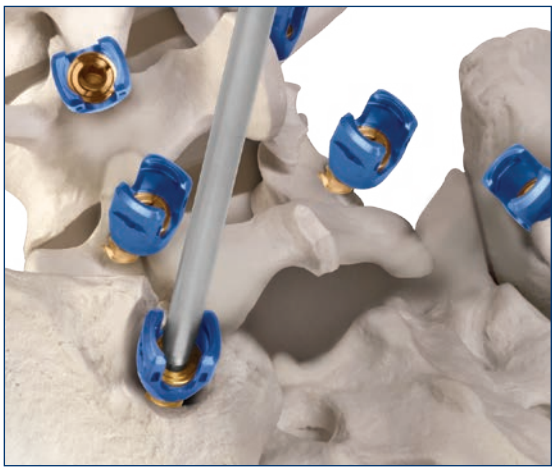

Screw Insertion into the Ilium


Step 4 Trans-Iliac Connector Insertion and Locking Cap Delivery

Using the **Rod Template** or the actual rods placed in the superior pedicle screws, trial the three **Trans-Illiac Connector** sizes for the best fit.


Using the Rod Holder, place the appropriate size Trans-Iliac Connector between the two iliac screws.

Set the desired width of the connector based on patient anatomy, using the **3.5mm Hex Driver, Self-Retaining**, to adjust the center screw. Secure the width by provisionally tightening.

Secure the connector to the iliac screws using two REVERE® Locking Caps.

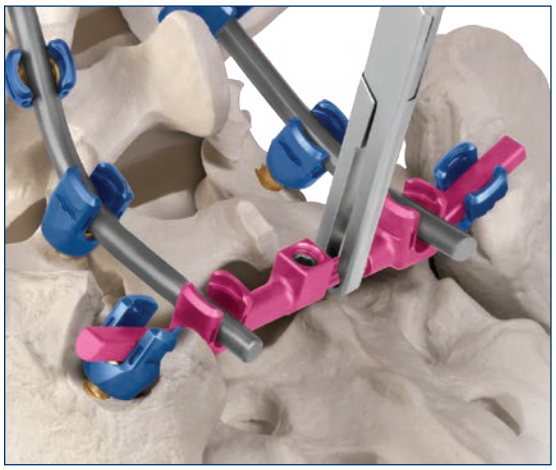

Insertion of Trans-Iliac Connector

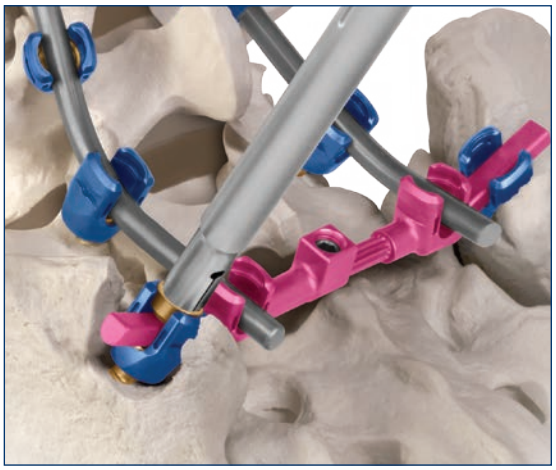

Insertion of locking cap


Step 5 Rod Insertion into Trans-Iliac Connector

Rod Preparation

Determine the appropriate length and contour of the rod using the Rod Template. *Note: The rods may be contoured using the **Rod Bender** and cut to length using the **Rod Cutter**.*

Rod Insertion

Once the appropriate length and contour of the rod are determined, grasp the rod using the Rod Holder or **Rod Gripper** and insert it into the REVERE® head of the Trans-Iliac Connector.

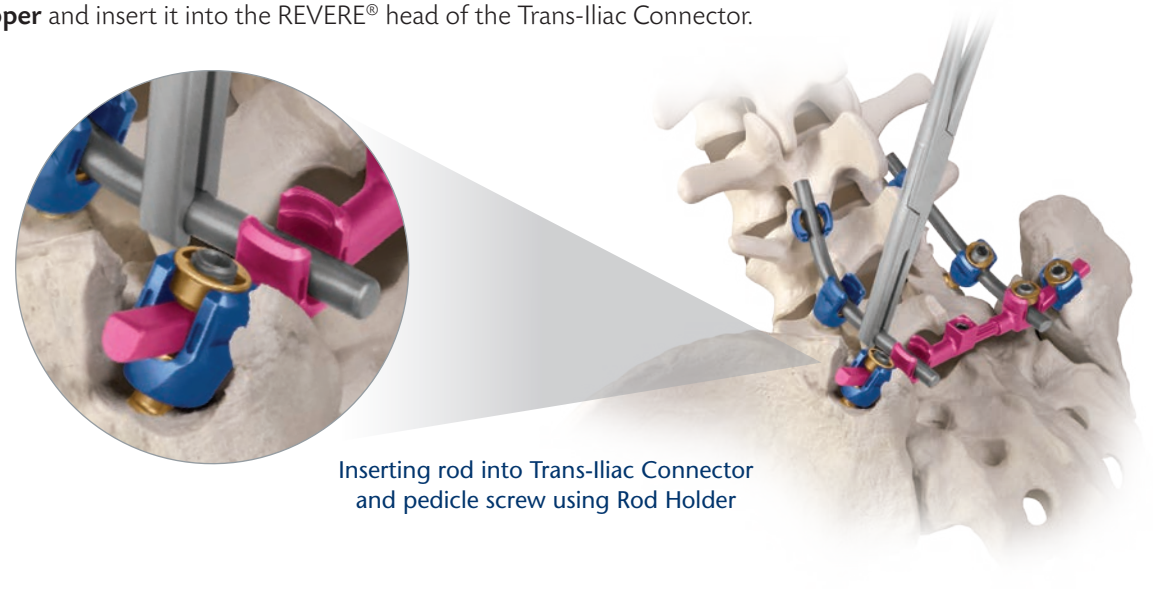

Inserting rod into Trans-Iliac Connector and pedicle screw using Rod Holder

If reduction is necessary, utilize the **REVERE® ADDITION® Reduction Tower**.

Secure the rod to the Trans-Iliac Connector using the **Locking Cap Driver** and a REVERE® Locking Cap.

Loosen the center set screw of the connector to allow for lateral translation and sagittal rotation of the connector ends. Approximate the location of the REVERE® head for the second rod and provisionally tighten the center set screw of the connector. After placement of the second rod, secure the rod to the connector using a locking cap.




Securing the rod to Trans-Iliac Connector with a locking cap

Step 6 Final Tightening

Final tightening of the Locking Caps and center set screw is necessary to secure the construct and is accomplished using the **Torque Limiting 3.5mm Hex Driver** and **Final Tightening Counter Torque** and Rod Gripper.

Insert the Torque Limiting 3.5mm Hex Driver into the Final Tightening Counter Torque and visually confirm the hex is fully engaged in the locking cap set screw. Slide the counter torque over the screw head, ensuring that the instrument is fully seated. Rotate the Hex Driver until it reaches the torque limit, which is confirmed by two audible clicks. Repeat for Locking Caps on either end.

Use the Rod Gripper and hex driver on the center set screw of the connector. Final tighten the center set screw to the specified torque. The counter torque is not necessary.

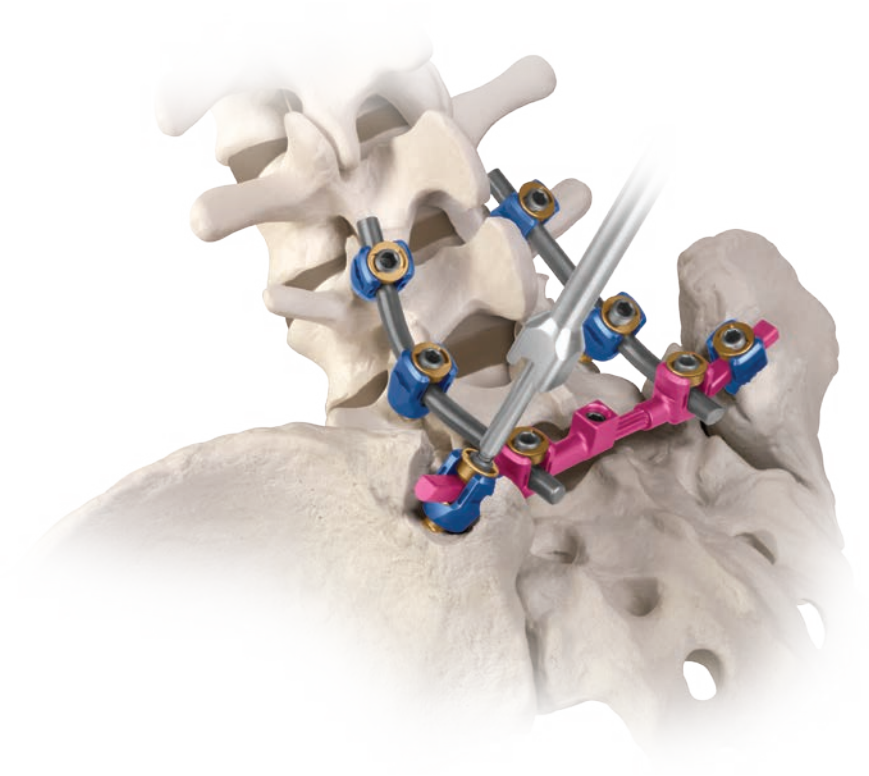


Torque Limits

Implants with 3.5mm Hex set screw
Titanium alloy implants are torqued to 5.5Nm
Stainless steel implants are torqued to 8.0Nm

Locking Cap Set Screw (3.5mm)
Titanium alloy implants are torqued to 5.5Nm
Stainless steel implants are torqued to 8.0Nm

Final Construct

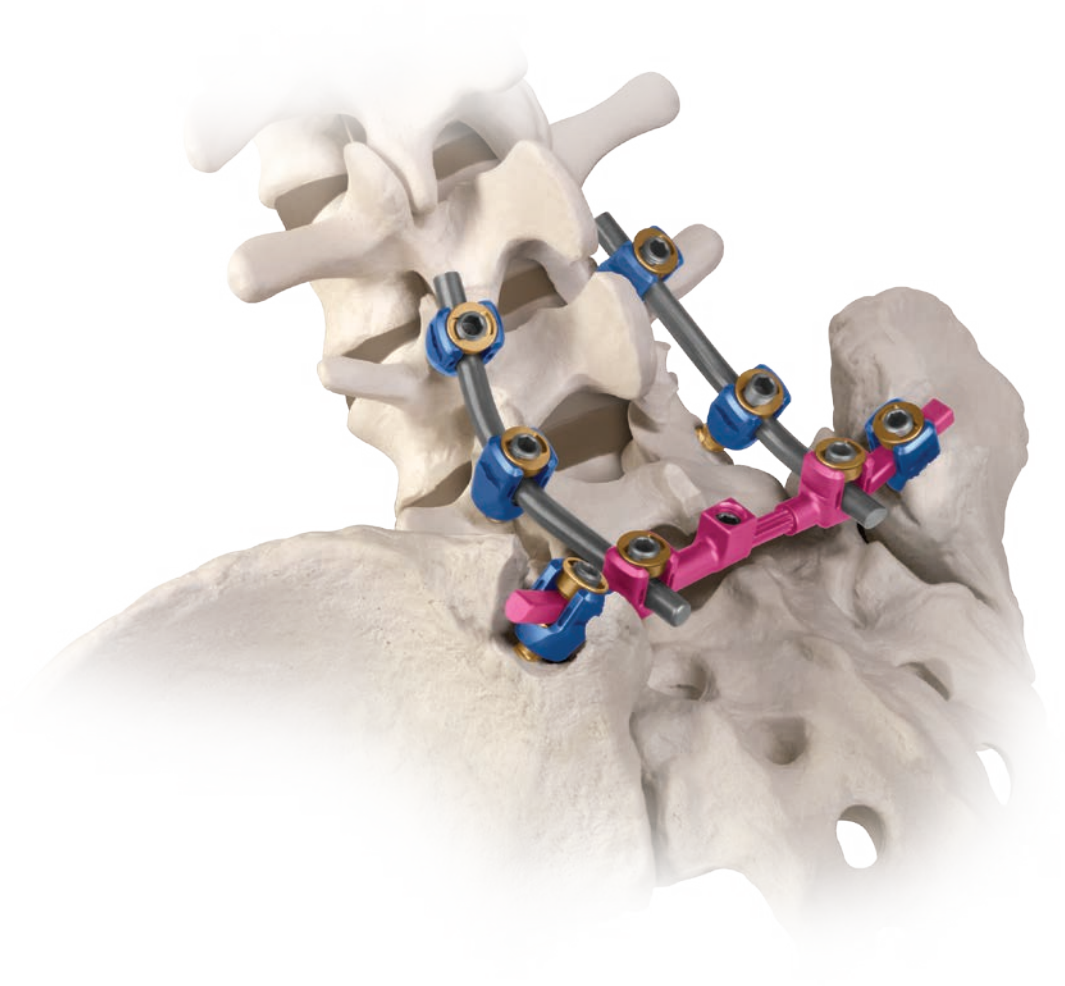

SACRAL PLATE
SURGICAL TECHNIQUE

Refer to the REVERE® Stabilization System Surgical Technique (GMTGD17) for use of REVERE® implants and associated instruments.

Step 1 Approach

The patient is placed under anesthesia and positioned prone. The operative area is carefully cleaned and an incision is made at the appropriate level(s). Lateral C-arm fluoroscopy or other radiographic methods may be utilized throughout surgery to ensure correct screw placement.

Step 2 Sacral Screw Site Preparation

Locate the sacral pedicle and remove bone and/or soft tissue as needed using standard preparation instruments. Temporarily place the REVERE® Sacral Plate over the sacral pedicle to ensure rod alignment and bony purchase for the ala screw.

Using the **Pedicle Awl** or bur, perforate the pedicle cortex through the superior hole of the plate. Remove the plate when complete.

Use the **Pedicle Probe** to open the pedicle pathway. Demarcations every 10mm on the probe indicate the depth of the pathway and help determine the proper screw length.

Use the **Ball Tip Probe** to verify that the walls of the prepared pedicle pathway are not violated.

Note: The chamfer on the caudal end of the sacral plate aims laterally towards the ala.




Using Pedicle Awl



Using the Ball Tip Probe

Step 3 Sacral Plate and Screw Insertion

Attach the **Quick Disconnect 1/4" Non-Ratcheting, Large Sport Handle** to the **Spring Loaded Monoaxial Screwdriver**. Load the sacral plate onto the monoaxial screwdriver. After checking the S1 pedicle hole integrity, slide the S1 end of the sacral plate over the Ball Tip Probe shaft. Lower the assembly to S1 to position the plate for rod alignment and ala hole location. Press the assembly down to engage the spike into the bone, utilizing the **Hammer** if necessary. The thin side of the sacral plate is medial and caudal.

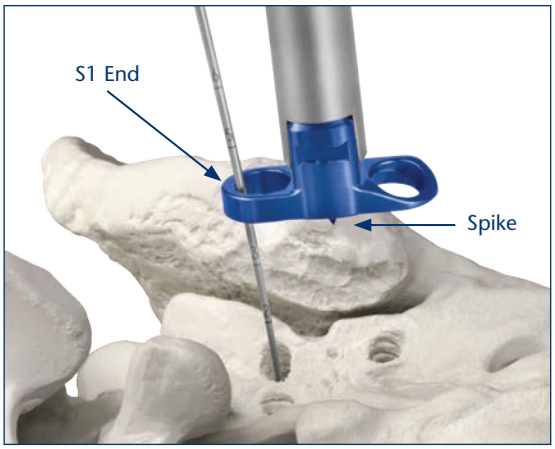


Sliding the S1 end of the sacral plate over the Ball Tip Probe


Using the preparation instruments, the ala clearance hole may be created through the plate or after placement of the S1 screw to ensure that the rod saddle remains aligned with the planned placement of the superior pedicle screws.

Select the appropriate bone screw and insert the screw through the sacral plate using the **Self-Retaining 3.5mm Hex Driver** until the Plate is secure. Insert the cephalad/S1 screw first, then repeat for the ala screw.

Note: Bone screws are available in standard and Dual Outer Diameter (DOD) thread styles; DOD screws are specifically designed to aid S1 fixation aimed medially.

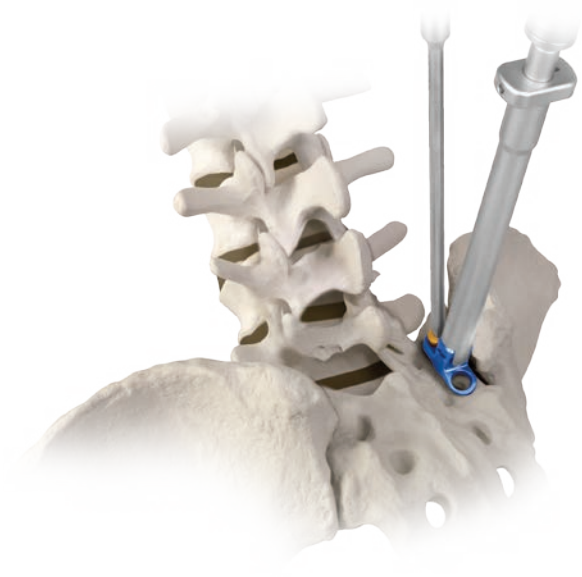


Inserting S1 screw

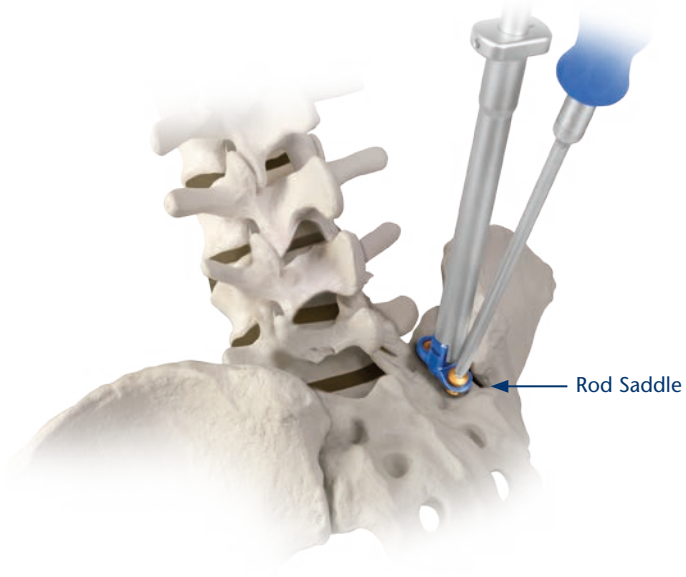

Inserting the ala screw

Step 4 Rod Insertion and Locking Cap Delivery


After the sacral plate has been inserted, select the appropriate pedicle screw(s) for the remaining level(s). Insert screws using the 3.5mm hex driver.

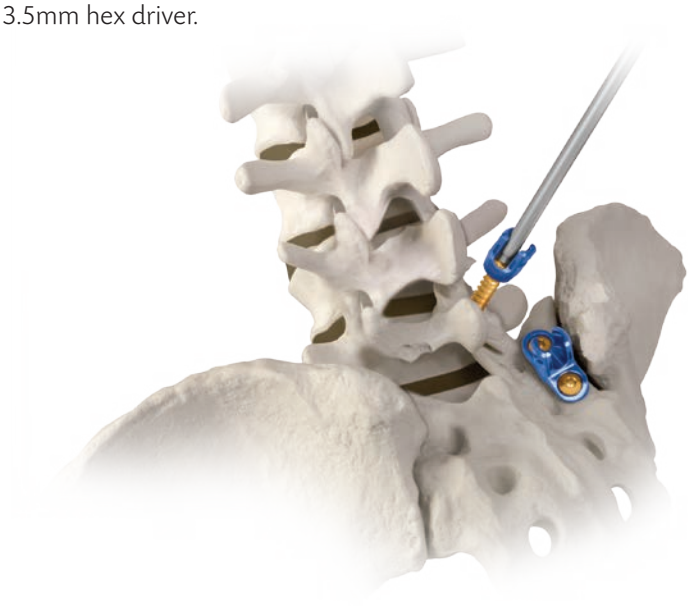

Screw insertion

Determine the appropriate length and contour of the rod using the Rod Template. Insert the contoured rod into the sacral plate and superior pedicle screws using a Rod Holder or Rod Gripper.

Note: The rods may be contoured using the Rod Bender and cut to length using the Rod Cutter.

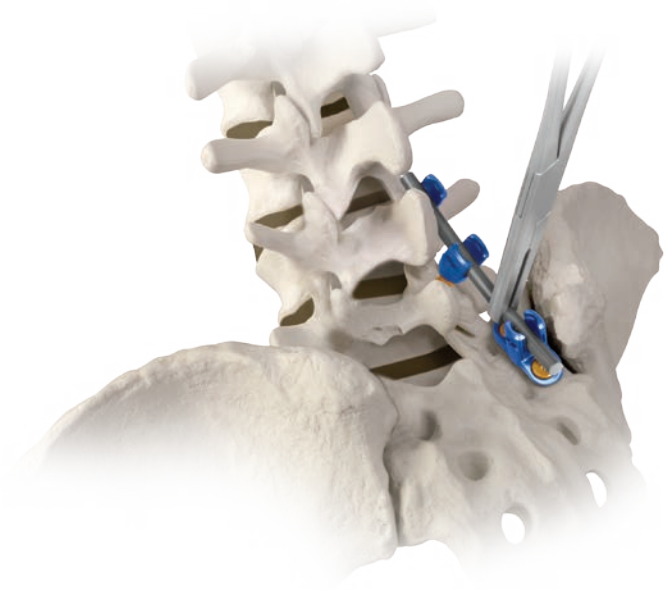


Placing the rod


Secure the screws to the rod using REVERE® Locking Caps and Locking Cap Driver.

Step 5 Compression or Distraction

REVERE® pedicle screws can be compressed or distracted along the rod as necessary using the **Parallel Compressor** or **Parallel Distractor**, respectively. REVERE® screws allow for screw angulation to be free or locked under compression or distraction. Tighten one of the set screws to establish a rigid point for compression or distraction. For parallel distraction, provisionally tighten the second set screw, locking the screw head, and then loosen it. Once compression or distraction is completed, provisionally tighten the set screw using the Self-Retaining 3.5mm Hex Driver or Torque Limiting 3.5mm Hex Driver.

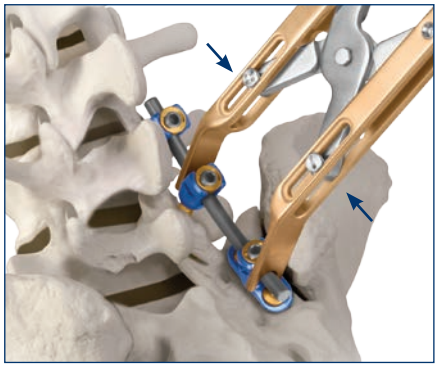


Compression

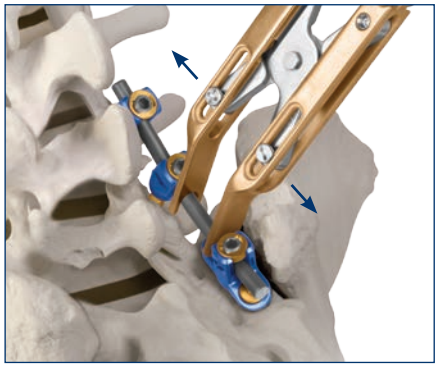


Distraction

Step 6 Final Tightening

Final tightening of the set screws is necessary to secure the construct and is accomplished using the Torque Limiting 3.5mm Hex Driver and Final Tightening Counter Torque. Insert the hex driver into the counter torque and visually confirm that the hex is fully engaged in the set screw. Slide the counter torque over the screw head, ensuring that the instrument is fully seated. Rotate the hex driver until it reaches the 5.5Nm torque limit, confirmed by two audible clicks. Repeat for all locking caps.

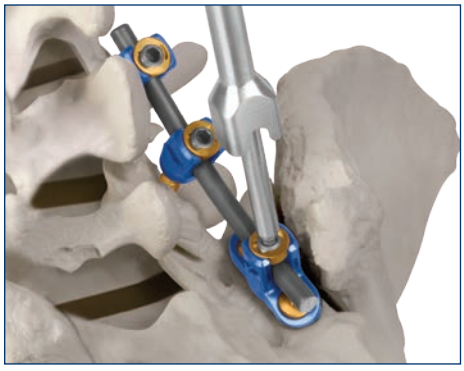


Visually confirming the hex is engaged in set screw

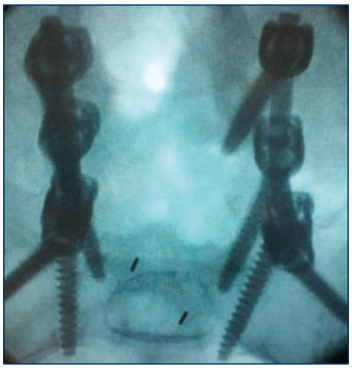

Final construct with divergent triangulation of the sacral plate screws

Final Construct

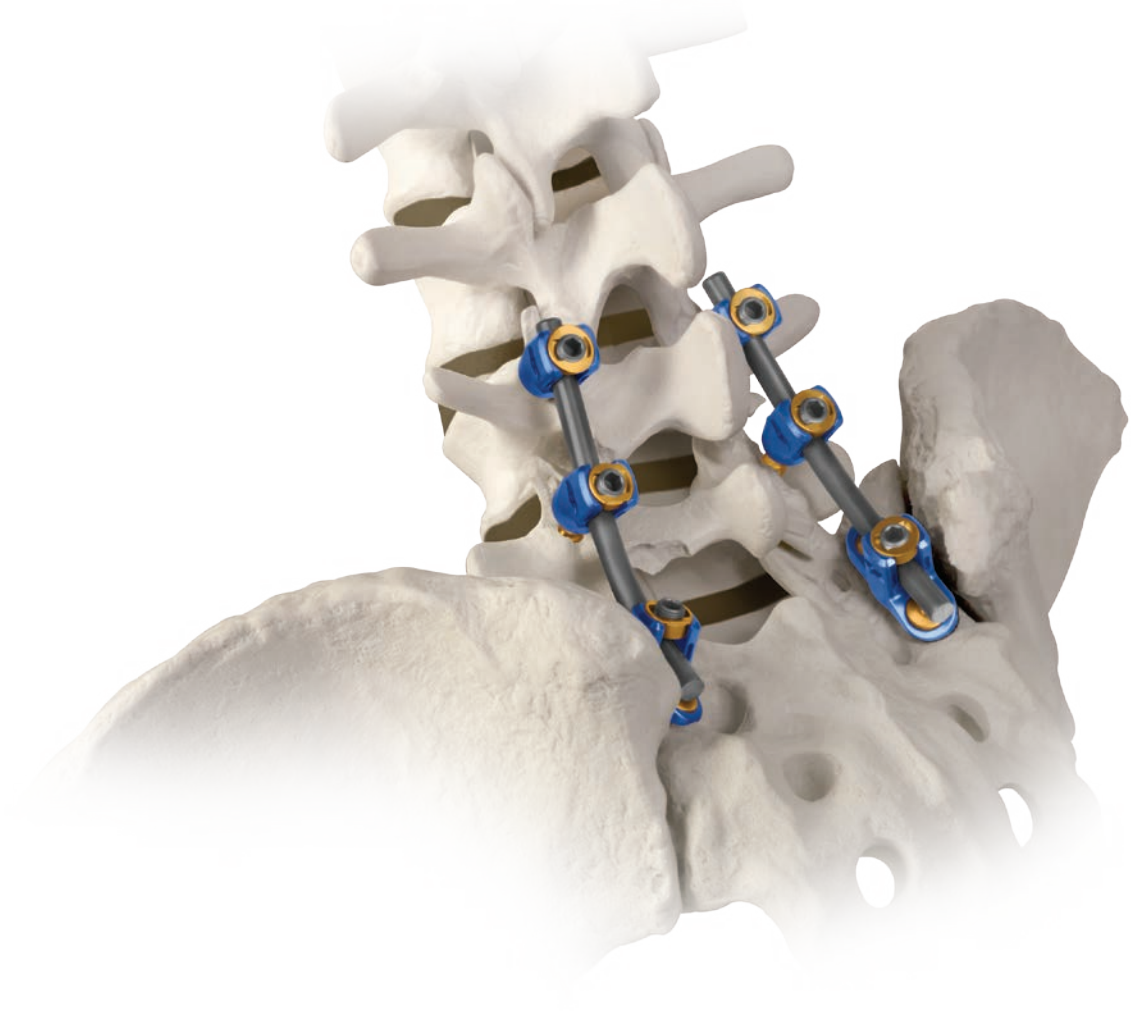

SACROILIAC PLATE
SURGICAL TECHNIQUE

Refer to the REVERE® Stabilization System Surgical Technique (GMTGD17) for use of REVERE® implants and associated instruments.

Step 1 Approach

The patient is placed under anesthesia and positioned prone. The operative area is carefully cleaned and an incision is made at the appropriate level(s). Lateral C-arm fluoroscopy or other radiographic methods may be utilized throughout surgery to ensure correct screw placement.


Step 2 Screw Site/Iliac Crest Preparation

When marking the sacral site with the **Pedicle Awl**, note the location of the iliac wing of the plate. Some bone removal may be necessary to allow placement of the plate. Ensure that the ala screw trajectory is superior and lateral, and that the rod is approximately aligned.

Expose the posterior superior iliac spine and locate the entry point for the iliac screw. Decorticate the entry point.

Use the **Sacral Probe** to open the pedicle pathway. Demarcations every 10mm on the **Probe** indicate the depth of the pathway and help determine proper screw length. Tap a pilot hole if desired.

Use a **Ball Tip Probe** to verify that the walls of the prepared pedicle pathway have not been violated.

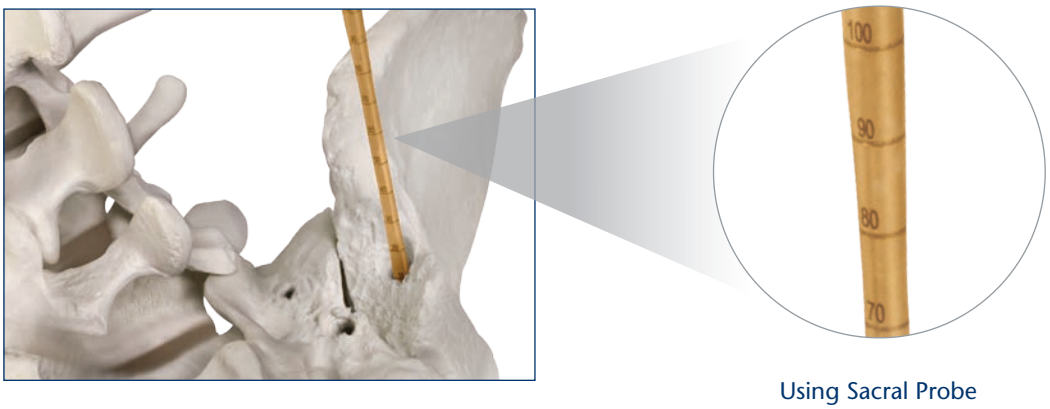


Using Sacral Probe

Step 3 Sacroiliac Plate and Screw Insertion

Attach the **Quick Disconnect 1/4" Non-Ratcheting, Large Sport Handle** to the **Spring Loaded Monoaxial Screwdriver**. Load the sacroiliac plate onto the monoaxial screwdriver. After checking the S1 pedicle hole integrity, slide the superior/sacral end of the sacroiliac plate over the Ball Tip Probe shaft and lower it to the sacrum to match the ala and iliac hole locations. Press the assembly down to engage the spike into the bone.

Remove bone as necessary to provide clearance for the iliac screw extension and to allow for proper plate alignment. Utilize the **Hammer**, if necessary, to set the spike.

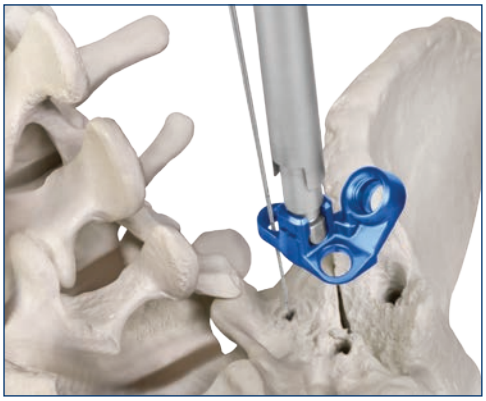


Sliding the S1 end of the sacroiliac plate over the Ball Tip Probe

Using the preparation instruments the ala clearance hole may be created through the plate or after placement of the superior S1 screw, to ensure that the rod saddle remains aligned with the planned placement of the superior pedicle screws.

Note: Bone screws are available in standard and Dual Outer Diameter (DOD) thread styles. DOD screw are specifically designed to aid S1 fixation aimed medially.

Select the appropriate bone screw and insert the screw through the sacroiliac plate using the **Self-Retaining 3.5mm Hex Driver**. Tighten until the plate is secure. Insert the cephalad/S1 first, then repeat for the ala screw.


To insert the iliac screw, select the appropriate DOD Offset Housing Screw and insert it through the plate into the ilium using the Self-Retaining 3.5mm Hex Driver. Tighten the screws until the Plate is secure. Further secure the Plate with the Offset Housing Plug, using the self-retaining **Torque Limiting Driver, 6mm Hex**. Repeat for the sacroiliac plate on the contralateral side.

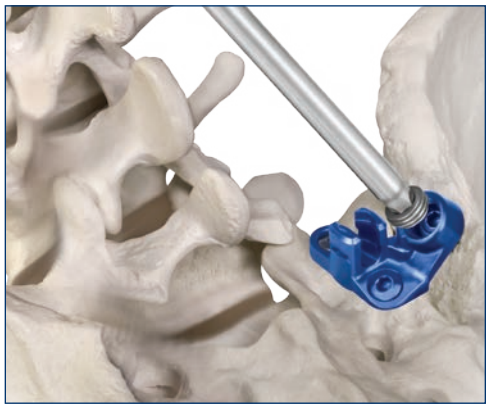

Inserting the Housing Plug

Sacroiliac Plate and Screw Insertion (cont'd)

After the sacroiliac plate has been inserted, select the appropriate pedicle screw(s) for the remaining level(s) of the construct. Insert screws using the 3.5mm hex driver.

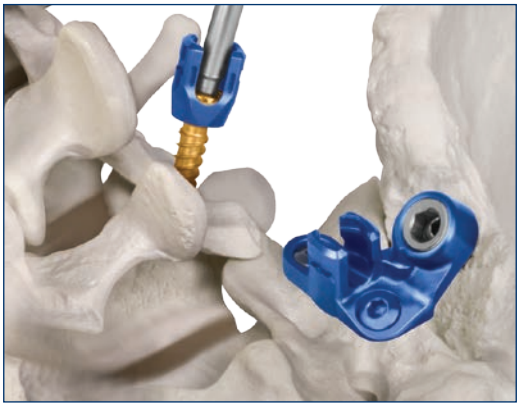


Screw insertion

Step 4 Rod Insertion and Locking Cap Delivery

Determine the appropriate length and contour of the rod using the **Rod Template**. Insert the rod into the pedicle screws and Sacroiliac Plate using a **Rod Holder** or **Rod Gripper**.

*Note: When placing the rod, it is important to begin with the sacroiliac plate, then the superior screws. The rod should be properly contoured before inserting the locking caps. The rods may be contoured using the **Rod Bender** and cut to length using the **Rod Cutter**.*


Secure the rod to the screws using REVERE® Locking Caps. Repeat on the contralateral side.

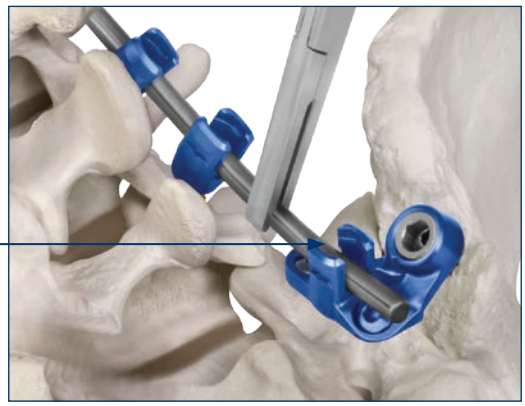


Rod insertion

Step 5 Compression or Distraction

REVERE® pedicle screws can be compressed or distracted along the rod as necessary using the **Parallel Compressor** or **Parallel Distractor**, respectively. REVERE® screws allow for screw angulation to be free or locked under compression or distraction. Tighten one of the set screws to establish a rigid point for compression or distraction. For parallel distraction, provisionally tighten the locking cap's set screw, locking the screw head, and then loosen it. Once compression or distraction is completed, provisionally tighten the set screw using the Self-Retaining 3.5mm Hex Driver or Torque Limiting 3.5mm Hex Driver.

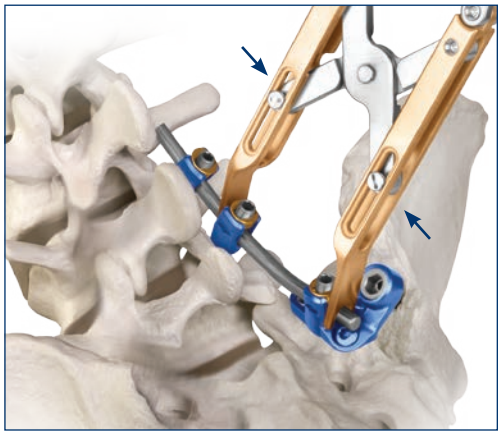

Compression

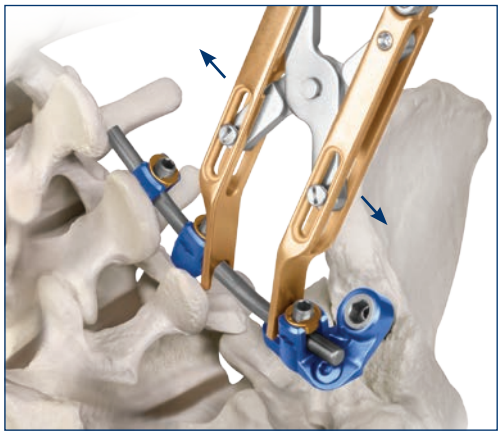


Distraction

Step 6 Final Tightening

Final tightening of the Housing Plug with the Torque Limiting Driver, 6mm Hex and **Offset Housing Counter Torque** is necessary to ensure the integrity of the construct.


Insert the 6mm hex into the counter torque. Slide the hex down until it is fully engaged in the Housing Plug; visually confirm engagement. Slide the Offset Housing Counter Torque over the Housing Plug. Rotate the 6mm hex until it reaches the torque limit (8.5Nm), which is confirmed by two audible clicks.

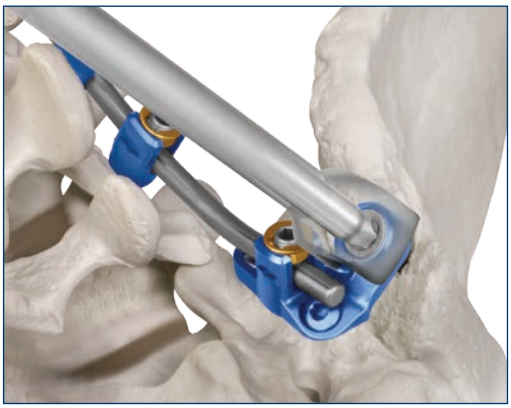

Fully engage the Housing Plug


Final tightening of the locking cap set screws is necessary to secure the construct and is accomplished using the Torque Limiting 3.5mm Hex Driver and **Final Tightening Counter Torque**.

Insert the 3.5mm hex driver into the counter torque and visually confirm that the hex is fully engaged in the set screw. Slide the counter torque over the screw head, ensuring that the instrument is fully seated. Rotate the hex driver until it reaches the 5.5Nm torque limit, confirmed by two audible clicks. Repeat for all locking caps.

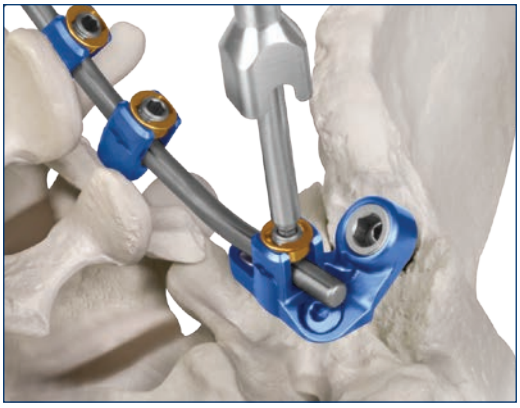

Visually confirming hex is engaged
in locking cap set screw


Final Construct

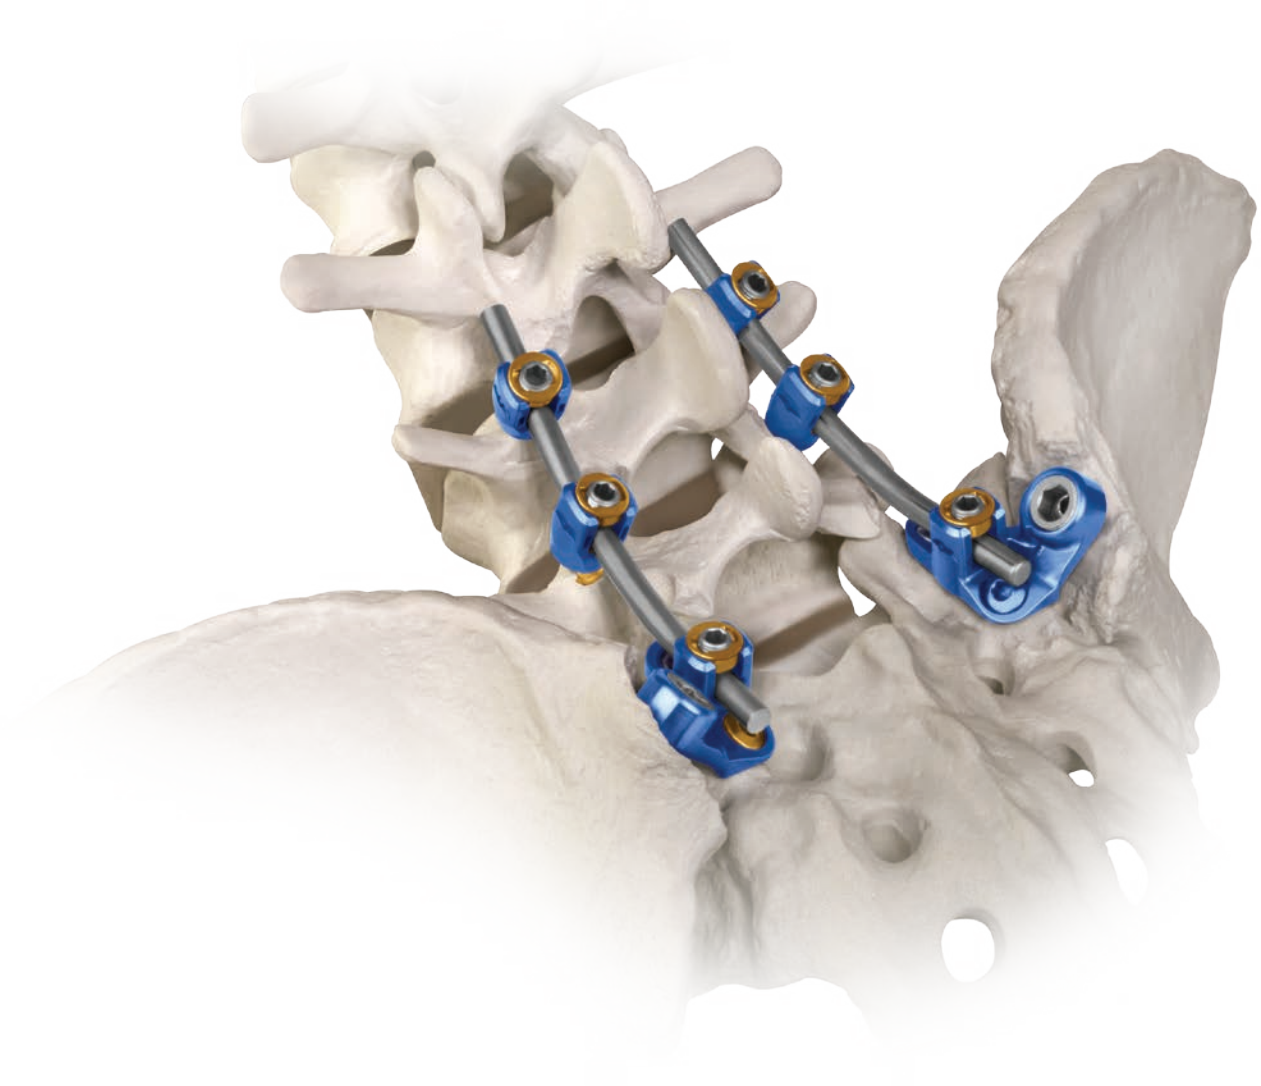

REVERE® ADDITION®
SACROILIAC FIXATION SET





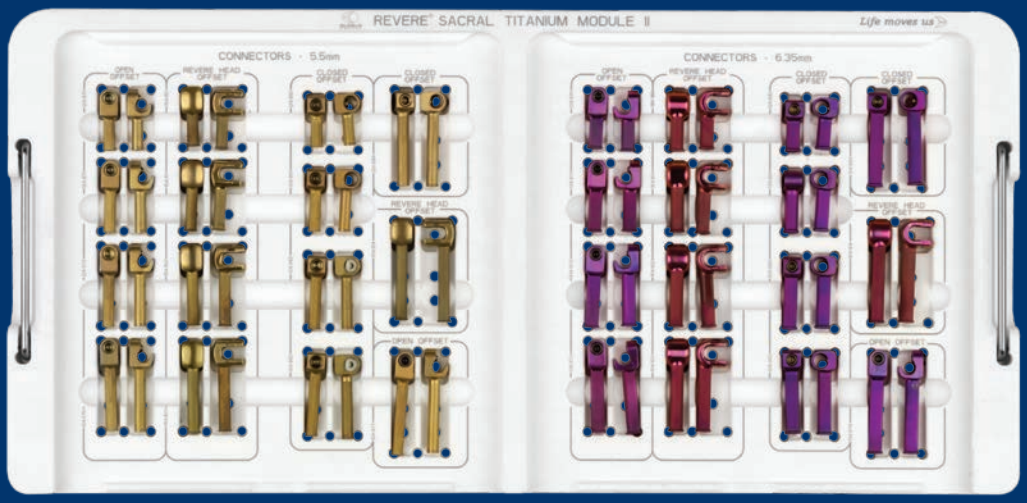

REVERE® ADDITION® Sacroiliac Fixation Set 954.911

Sacroiliac Fixation Offset Connectors – Material: Titanium Alloy

Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	124.970	2	15mm	134.970	2
20mm	124.971	2	20mm	134.971	2
25mm	124.972	2	25mm	134.972	2
30mm	124.976	2	30mm	134.973	2
35mm	124.977	2	35mm	134.974	2
100mm	124.973	0	100mm	134.975	0
120mm	124.974	0	120mm	134.976	0
150mm	124.975	2	150mm	134.977	2

Closed Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	124.990	2	15mm	134.990	2
20mm	124.991	2	20mm	134.991	2
25mm	124.992	2	25mm	134.992	2
30mm	124.993	2	30mm	134.993	2
35mm	124.994	2	35mm	134.994	2
100mm	124.995	0	100mm	134.995	0
120mm	124.996	0	120mm	134.996	0
150mm	124.997	2	150mm	134.997	2

REVERE® Head Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	154.150	2	15mm	154.160	2
20mm	154.151	2	20mm	154.161	2
25mm	154.152	2	25mm	154.162	2
30mm	154.153	2	30mm	154.163	2
35mm	154.154	2	35mm	154.164	2
100mm	154.155	0	100mm	154.165	0
120mm	154.156	0	120mm	154.166	0
150mm	154.157	2	150mm	154.167	2

Items highlighted in gray are additionally available.
**Accepts the indicated rod size*

REVERE® ADDITION® Sacroiliac Fixation Set 954.911 (cont'd)

Sacroiliac Offset Housing Clamps – Material: Titanium Alloy

Offset Housing Clamps




Accepts 5.5mm Rod 25° Up Angle

Clamp Length	Part No.	Qty
15mm (Straight)	154.532	2
15mm (Left)	154.550	2
15mm (Right)	154.560	2
20mm (Straight)	154.542	2
20mm (Left)	154.552	2
20mm (Right)	154.562	2

Accepts 6.35mm Rod 25° Up Angle

Clamp Length	Part No.	Qty
15mm (Straight)	154.632	2
15mm (Left)	154.650	2
15mm (Right)	154.660	2
20mm (Straight)	154.642	2
20mm (Left)	154.652	2
20mm (Right)	154.662	2

DOD Offset Housing Screws

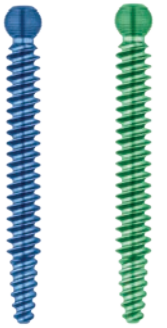

6.5mm 7.0mm


6.5mm

Screw Length	Part No.	Qty
65mm	154.461	2
70mm	154.462	2
75mm	154.463	2
80mm	154.464	2
85mm	154.465	2
90mm	154.466	2
100mm	154.467	0
110mm	154.468	0
120mm	154.469	0

7.0mm

Screw Length	Part No.	Qty
65mm	154.471	2
70mm	154.472	2
75mm	154.473	2
80mm	154.474	2
85mm	154.475	2
90mm	154.476	2
100mm	154.477	0
110mm	154.478	0
120mm	154.479	0

Housing Plug



Part No.	Qty
154.000	6

Items highlighted in gray are additionally available.

REVERE® ADDITION® Sacroiliac Fixation Set 954.911 (cont'd)

Sacroiliac Trans-Iliac Connectors – Material: Titanium Alloy

REVERE® Trans-Iliac Connectors



5.5mm Rod System

Rod Length	Part No.	Qty	Color
35–40mm	154.969	2	Aqua
40–48mm	154.970	2	Fucshia
48–57mm	154.971	0	Gold

6.35mm Rod System

Rod Length	Part No.	Qty	Color
35–40mm	154.669	2	Medium Blue
40–48mm	154.670	2	Medium Green
48–57mm	154.671	0	Brown

Sacroiliac Plate – Material: Titanium Alloy

REVERE® Sacroiliac Plate



Accepts 5.5mm

Description	Part No.	Qty
REVERE® Sacroiliac Plate, Left	154.011	1
REVERE® Sacroiliac Plate, Right	154.012	1


REVERE® Sacral Plate



Description	Part No.	Qty
REVERE® Sacral Plate, Left	154.001	1
REVERE® Sacral Plate, Right	154.002	1

Items highlighted in gray are additionally available.

REVERE® ADDITION®
SACROILIAC FIXATION SET

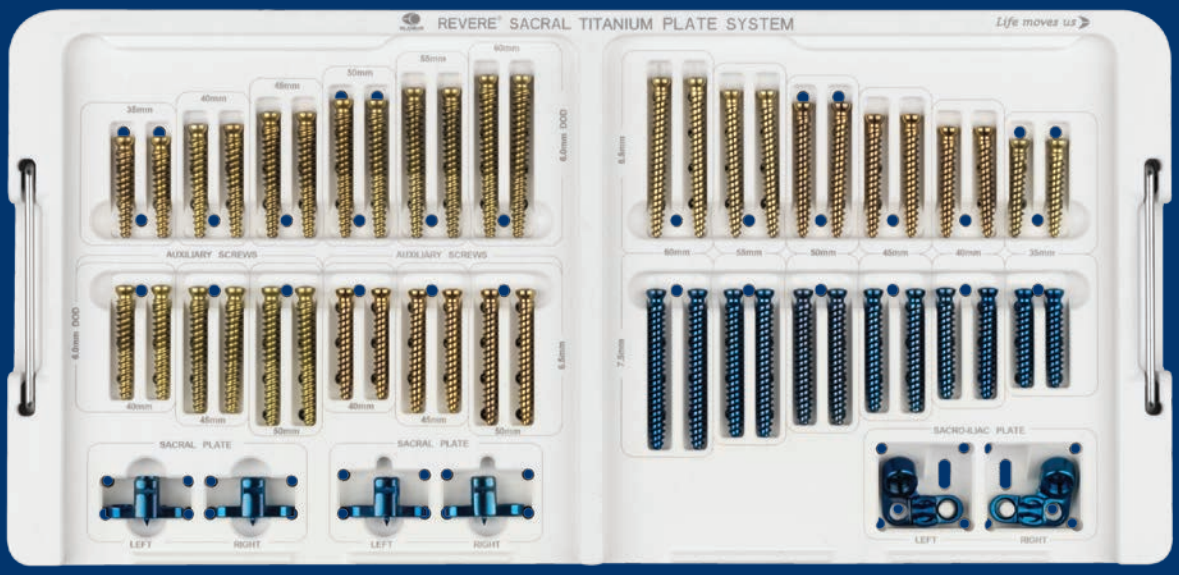

REVERE® ADDITION® Sacroiliac Fixation Set 954.911 (cont'd)

Sacral Plate Bone Screws – Material: Titanium Alloy

Dual Outer Diameter Bone Screws



6.0mm

Screw Length	Part No.	Qty
30mm	154.022	0
35mm	154.023	2
40mm	154.024	4
45mm	154.025	4
50mm	154.026	4
55mm	154.027	2
60mm	154.028	2

Bone Screw, Anterior Plate



5.5mm

Screw Length	Part No.	Qty
30mm	162.352	0
35mm	162.353	0
40mm	162.354	0
45mm	162.355	0
50mm	162.356	0

6.5mm


Screw Length	Part No.	Qty
30mm	162.362	0
35mm	162.363	2
40mm	162.364	4
45mm	162.365	4
50mm	162.366	4
55mm	162.367	2
60mm	162.368	2


7.5mm

Screw Length	Part No.	Qty
30mm	162.372	0
35mm	162.373	2
40mm	162.374	2
45mm	162.375	2
50mm	162.376	2
55mm	162.377	2
60mm	162.378	2

Items highlighted in gray are additionally available.

REVERE® ADDITION® SACROILIAC FIXATION SET

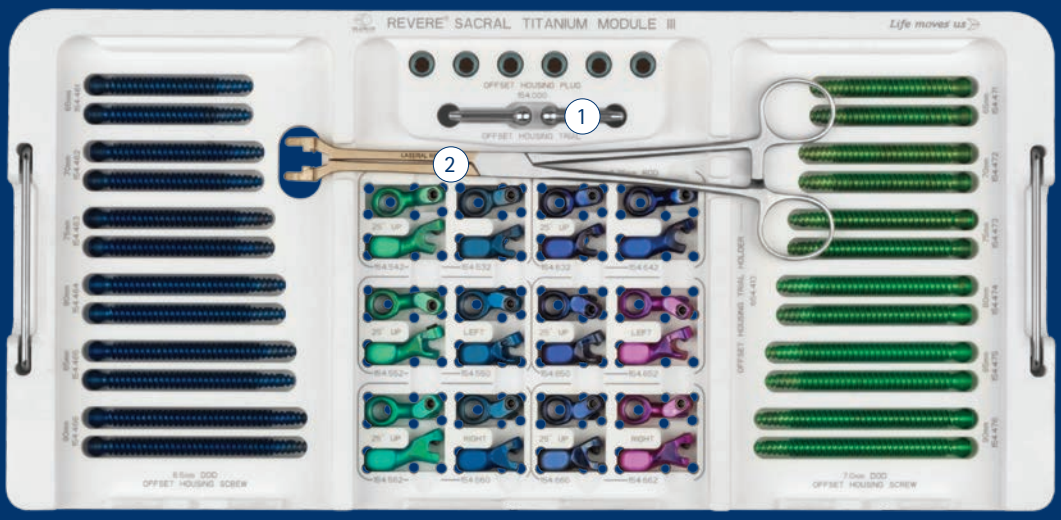

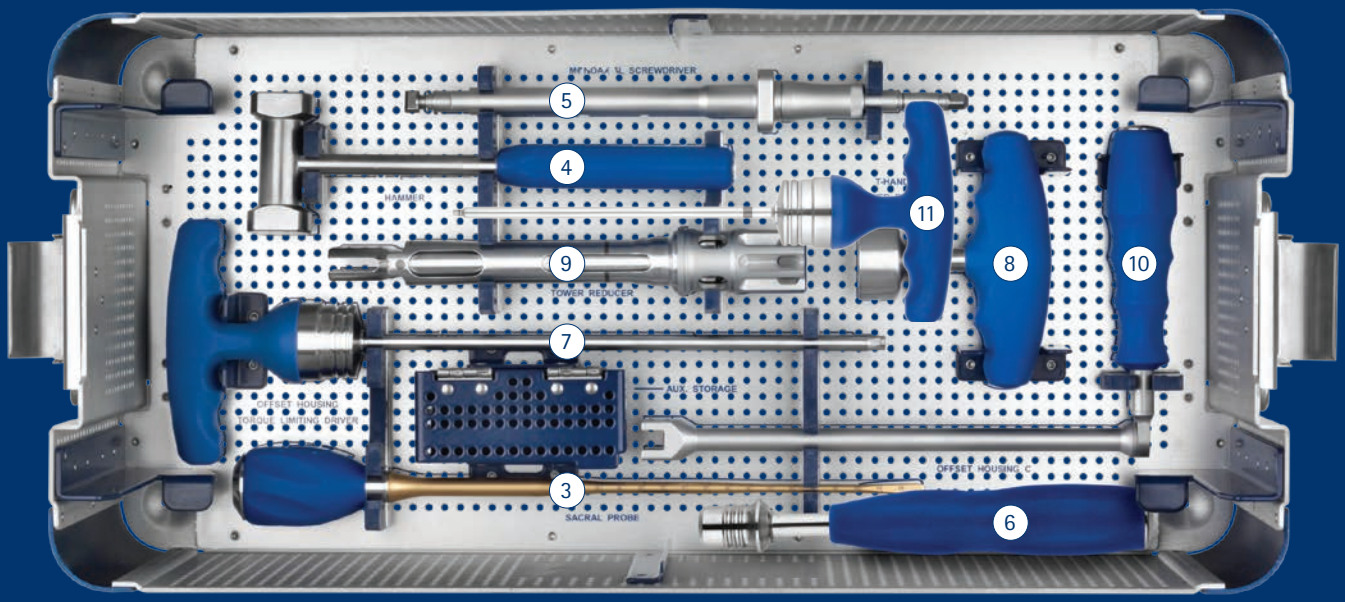

REVERE® ADDITION® Sacroiliac Fixation Set 954.911 (cont'd)

	Instruments		Qty
1	654.412	ADDITION® Sacroiliac Post	2
2	654.413	Offset Housing Trial Holder/Lateral Reducer	1
3	654.401	Sacral Probe, Straight	1
4	603.008	Hammer	1
5	624.320	Monoaxial Screwdriver, Spring-Loaded	1
6	634.406	Quick-Connect, 1/4" Non-Ratcheting, Large Sport Handle	1
7	654.400	Torque Limiting Driver, 6mm Hex	1
8	624.801	T-Handle, Tower Reducer	1
9	624.802	REVERE® ADDITION® Reduction Tower	1
	634.802	REVERE® 6.35 ADDITION® Reduction Tower	0
10	654.402	Offset Housing Counter Torque	1
11	654.415	3.5mm Torque Limiting Driver	1
	954.004	Sacral Plate Module Assembly	
	954.404	Sacral Plate Module Assembly, Spare	
	954.211	REVERE® ADDITION® Sacroiliac Graphic Case	

Items highlighted in gray are additionally available.

REVERE® Sacral Plate Stand-Alone Set 954.905

Sacral Plate Bone Screws – Material: Titanium Alloy

Dual Outer Diameter Bone Screws



6.0mm

Screw Length	Part No.	Qty
30mm	154.022	0
35mm	154.023	2
40mm	154.024	4
45mm	154.025	4
50mm	154.026	4
55mm	154.027	2
60mm	154.028	2

Bone Screw, Anterior Plate



5.5mm

Screw Length	Part No.	Qty
25mm	162.351	0
30mm	162.352	0
35mm	162.353	0
40mm	162.354	0
45mm	162.355	0
50mm	162.356	0

6.5mm

Screw Length	Part No.	Qty
25mm	162.361	0
30mm	162.362	0
35mm	162.363	2
40mm	162.364	4
45mm	162.365	4
50mm	162.366	4
55mm	162.367	2
60mm	162.368	2

7.5mm

Screw Length	Part No.	Qty
25mm	162.371	0
30mm	162.372	0
35mm	162.373	2
40mm	162.374	2
45mm	162.375	2
50mm	162.376	2
55mm	162.377	2
60mm	162.378	2

Items highlighted in gray are additionally available.

REVERE® Sacral Plate Stand-Alone Set 954.905 (cont'd)

Sacroiliac Plate – Material: Titanium Alloy

REVERE®
Sacral Plate





Description	Part No.	Qty
REVERE® Sacral Plate, Left	154.001	2
REVERE® Sacral Plate, Right	154.002	2


Instruments

Description		Qty
603.008	Hammer	1
624.320	Monoaxial Screwdriver, Spring-Loaded	1
634.406	Quick-Connect, 1/4" Non-Ratcheting, Large Sport Handle	1
954.004	Sacral Plate Module Assembly	

STAINLESS STEEL REVERE® ADDITION® SACROILIAC FIXATION SET

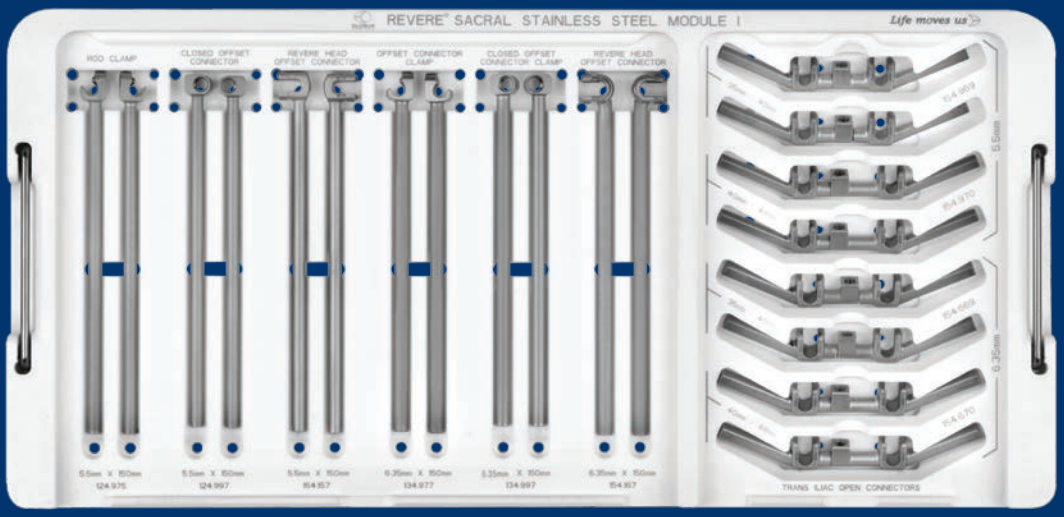

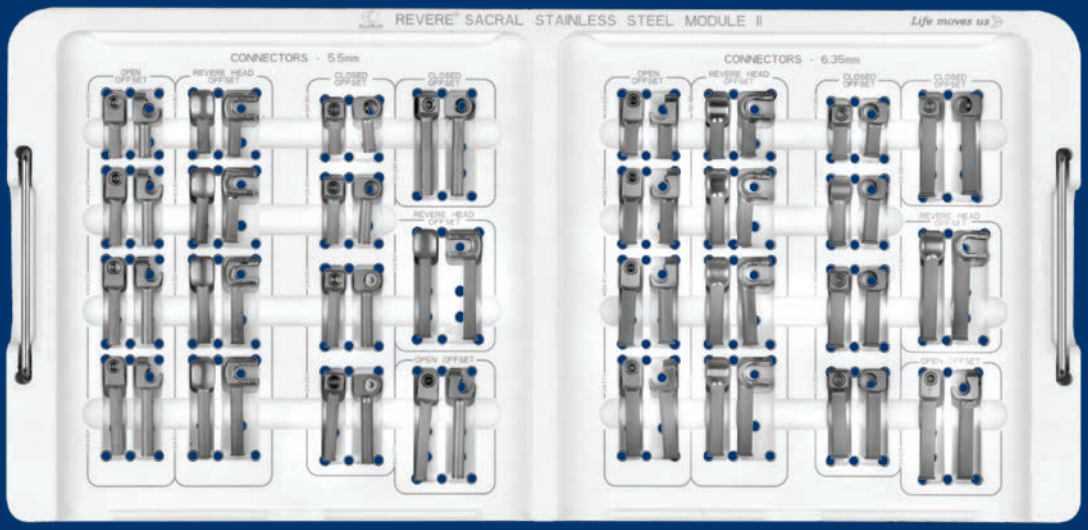

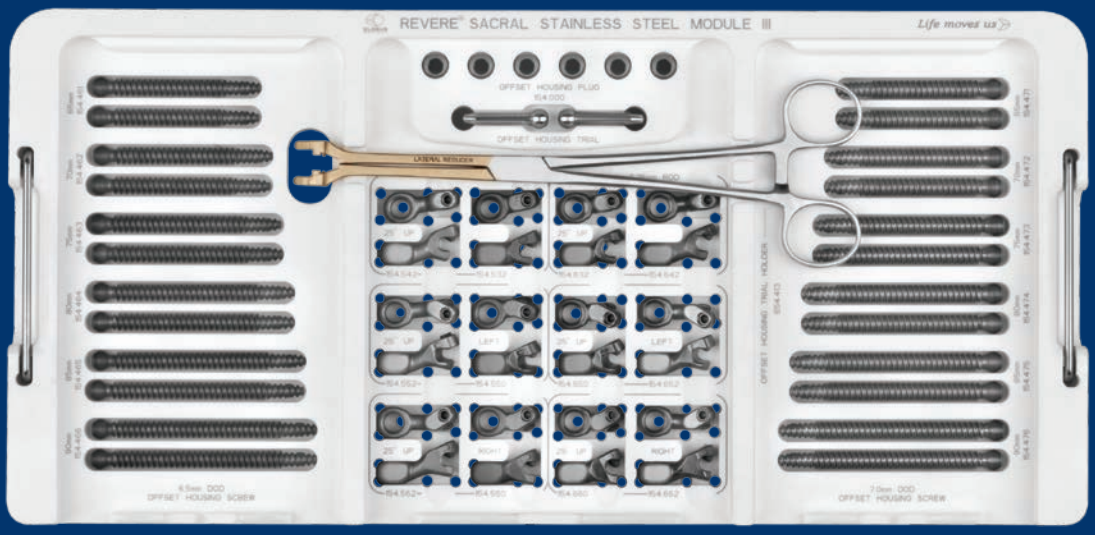

Stainless Steel REVERE® ADDITION® Sacroiliac Fixation Set 954.913

Sacroiliac Fixation Offset Connectors – Material: Stainless Steel

Stainless Steel Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	224.970	2	15mm	234.970	2
20mm	224.971	2	20mm	234.971	2
25mm	224.972	2	25mm	234.972	2
30mm	224.976	2	30mm	234.973	2
35mm	224.977	2	35mm	234.974	2
100mm	224.973	0	100mm	234.975	0
120mm	224.974	0	120mm	234.976	0
150mm	224.975	2	150mm	234.977	2

Stainless Steel Closed Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	224.990	2	15mm	234.990	2
20mm	224.991	2	20mm	234.991	2
25mm	224.992	2	25mm	234.992	2
30mm	224.993	2	30mm	234.993	2
35mm	224.994	2	35mm	234.994	2
100mm	224.995	0	100mm	234.995	0
120mm	224.996	0	120mm	234.996	0
150mm	224.997	2	150mm	234.997	2

Stainless Steel REVERE® Head Offset Connectors



5.5mm*			6.35mm*		
Rod Length	**Part No.**	**Qty**	**Rod Length**	**Part No.**	**Qty**
15mm	254.150	2	15mm	254.160	2
20mm	254.151	2	20mm	254.161	2
25mm	254.152	2	25mm	254.162	2
30mm	254.153	2	30mm	254.163	2
35mm	254.154	2	35mm	254.164	2
100mm	254.155	0	100mm	254.165	0
120mm	254.156	0	120mm	254.166	0
150mm	254.157	2	150mm	254.167	2

Items highlighted in gray are additionally available.
**Accepts the indicated rod size*

Stainless Steel REVERE® ADDITION® Sacroiliac Fixation Set 954.913 (cont'd)

Sacroiliac Offset Housing Clamps – Material: Stainless Steel

Offset Housing Clamps




Accepts 5.5mm Rod 25° Up Angle

Clamp Length	Part No.	Qty
15mm (Straight)	254.532	2
15mm (Left)	254.550	2
15mm (Right)	254.560	2
20mm (Straight)	254.542	2
20mm (Left)	254.552	2
20mm (Right)	254.562	2

Accepts 6.35mm Rod 25° Up Angle

Clamp Length	Part No.	Qty
15mm (Straight)	254.632	2
15mm (Left)	254.650	2
15mm (Right)	254.660	2
20mm (Straight)	254.642	2
20mm (Left)	254.652	2
20mm (Right)	254.662	2

DOD Offset Housing Screws

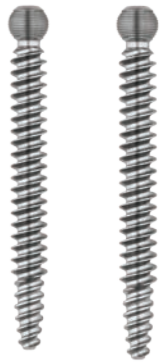

6.5mm 7.0mm

6.5mm

Screw Length	Part No.	Qty
65mm	254.461	2
70mm	254.462	2
75mm	254.463	2
80mm	254.464	2
85mm	254.465	2
90mm	254.466	2
100mm	254.467	0
110mm	254.468	0
120mm	254.469	0

7.0mm

Screw Length	Part No.	Qty
65mm	254.471	2
70mm	254.472	2
75mm	254.473	2
80mm	254.474	2
85mm	254.475	2
90mm	254.476	2
100mm	254.477	0
110mm	254.478	0
120mm	254.479	0

Housing Plug



Part No.	Qty
254.000	6

Items highlighted in gray are additionally available.

Stainless Steel REVERE® ADDITION® Sacroiliac Fixation Set 954.913 (cont'd)

Sacroiliac Trans-Iliac Connectors – Material: Stainless Steel

Stainless Steel Trans-Iliac Connectors



5.5mm Rod System


Rod Length	Part No.	Qty
35–40mm	254.969	2
40–48mm	254.970	2
48–57mm	254.971	0


6.35mm Rod System

Rod Length	Part No.	Qty
35–40mm	254.669	2
40–48mm	254.670	2
48–57mm	254.671	0

Items highlighted in gray are additionally available.

STAINLESS STEEL REVERE® ADDITION® SACROILIAC FIXATION SET

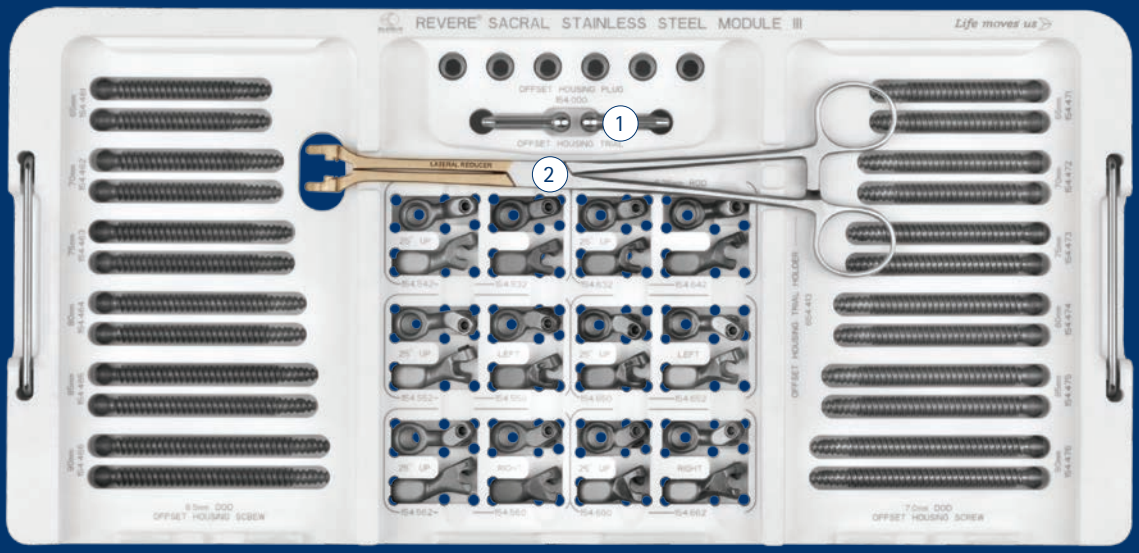

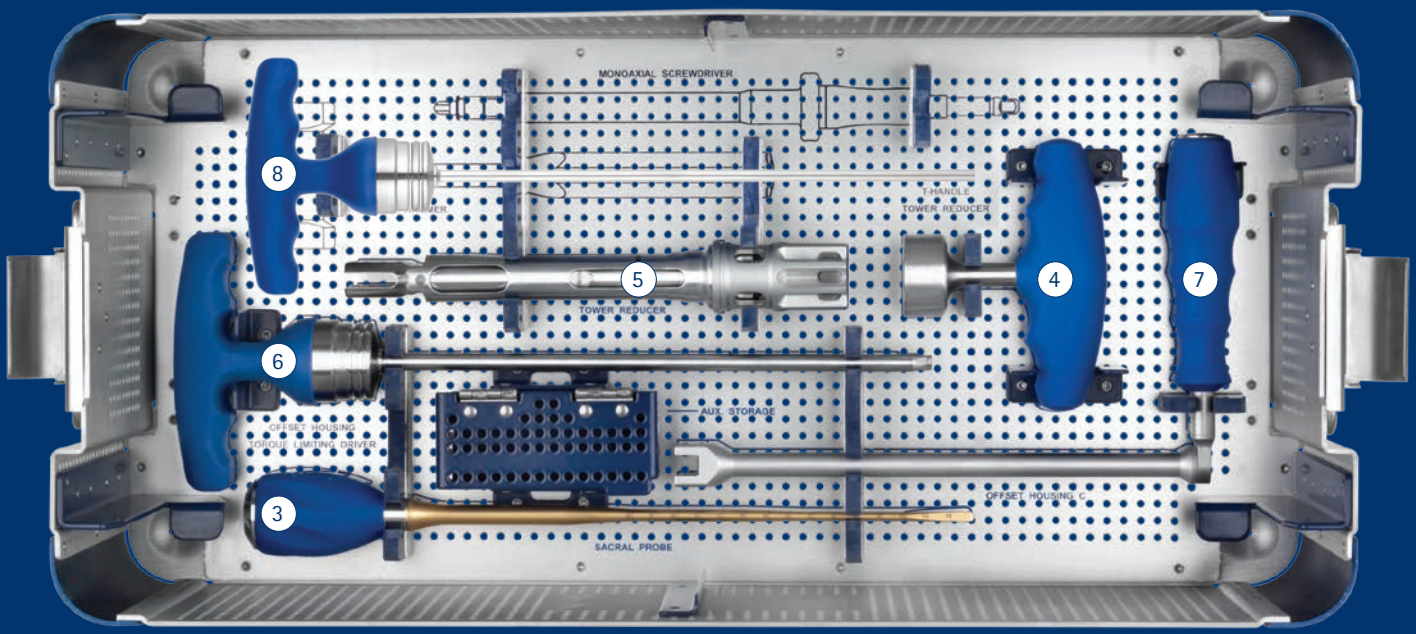

Stainless Steel REVERE® ADDITION® Sacroiliac Fixation Set 954.913 (cont'd)

	Instruments		Qty
1	654.412	ADDITION® Sacroiliac Post	2
2	654.413	Offset Housing Trial Holder/Lateral Reducer	1
3	654.401	Sacral Probe, Straight	1
4	624.801	T-Handle, Tower Reducer	1
5	624.802	REVERE® ADDITION® Reduction Tower	1
6	654.414	SS Torque Limiting Driver, 6mm Hex	1
7	654.402	Offset Housing Counter Torque	1
8	654.415	3.5mm Torque Limiting Driver, SS	1
	954.213	REVERE® ADDITION® Sacroiliac Graphic Case	
	954.404	Sacral Plate Module Assembly, Spare	

Items highlighted in gray are additionally available.

Notes

Notes

Globus Medical
Valley Forge Business Center
2560 General Armistead Avenue
Audubon, PA 19403
www.globusmedical.com

Customer Service:
Phone 1-866-GLOBUS1 (or 1-866-456-2871)
Fax 1-866-GLOBUS3 (or 1-866-456-2873)

©2023 Globus Medical. All rights reserved. Patent www.globusmedical.com/patents.
Life moves us is a registered trademark of Globus Medical. Please refer to package insert for description, indications, contraindications, warnings, precautions and other important information.

CE 0297

EC REP : AJW Technology Consulting GmbH
Breite Straße 3 40213 Düsseldorf, Germany

GMTGD64OU
11.23 Rev B